

Parts List

1	Driver / left rocker step
1	Passenger / left rocker step
12	Hex bolt, M8
12	Flat washer, M8
12	Lock washer, M8

Tools Required

Ratchet	Torque wrench
Extension	Socket, 13mm
Flathead screwdriver	Level

Torque Specifications

	METRIC	SAE
M6 bolt	3 ft.-lbs.	
M8 bolt	7 ft.-lbs.	
M10 bolt	16 ft.-lbs.	
M12 bolt	28 ft.-lbs.	
1/4" bolt		3 ft.-lbs.
5/16" bolt		7 ft.-lbs.
3/8" bolt		16 ft.-lbs.
7/16" bolt		20 ft.-lbs.
1/2" bolt		28 ft.-lbs.


Level of Difficulty

Easy



Scan for helpful install tips

Product Image

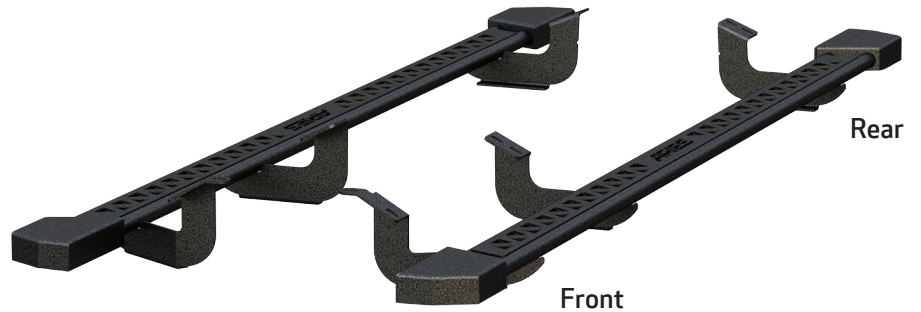

Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For black finishes, mild soap may be used to clean the product.

Refer to the table to the left when securing hardware during the installation process to help prevent damage to the product or vehicle.

Step 1

Starting on the driver side, locate the three mounting locations underneath the vehicle.



Step 2

With help, lift the rocker step into position and align the brackets on the rocker step with the mounting points on the vehicle.

Secure the front mounting location to the vehicle with two M8 hex bolts, two lock washers and two flat washers.


Snug the hardware, but do not fully tighten.



Step 3

Repeat step 2 to secure the middle and rear mounting locations to the vehicle.

Tighten all hardware to the recommended torque specifications listed in the table on the first page.

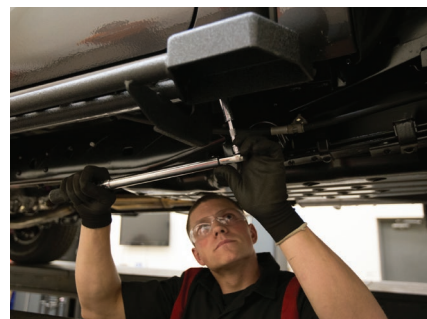

Step 4

Repeat steps 1 through 3 on the passenger side of the vehicle.

Congratulations on the installation of your new ARIES rocker steps.

With the rocker steps installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

To protect your investment, see the 'Notes and Maintenance' section on the first page of this instruction manual.

