



Spring removal and installation tool kit

CONTENTS

1 x Coil Spring Ring 1 x Leaf Spring Bush Guide 1 x M12x200mm Bolt 1 x M12 Nut

TOOLS REQUIRED

Spring Compressor **Bearing Puller Bearing Separator** Spanners

Note: Refer to Fitting Instructions 3788079 for strut removal and installation.

INSTALLATION PROCEDURE – COIL SPRINGS

The coil spring ring is designed to evenly distribute the load on the top rubber spring retainer, when assembling the front strut.



OE BUSH REMOVAL – LEAF SPRINGS

Place the bearing separator between the eye of the leaf spring and the outer lip of the bush. Adjust the separator to sit on the face of the spring and not be restricting the bush.



Using the bearing puller as shown, push out the bush. A light lubricant can be sprayed between the bush and the spring to assist removal.



BUSH INSTALLATON – LEAF SPRINGS

Thoroughly grease the new spring and bush before installation.





