

Parts List

1	License plate relocation bracket
4	Phillips-head screw, M6 x 14mm
4	Flange nut, M6
4	Pan-head thread-forming screw, M4 x 20mm

Tools Required

Wrench, 10mm	Torx bit, T20
Phillips Screwdriver	

Level of Difficulty

Easy



Scan for helpful install tips

Product Image



Notes and Maintenance

Before you begin installation, read all instructions thoroughly.


Proper tools will improve the quality of installation and reduce the time required.

For black finishes, mild soap may be used to clean the product.

Step 1

Locate and remove the 4 self-threading screws from the skid plate on the bull bar.

Place the license plate relocation bracket up to the bull bar skid plate. Secure the relocation bracket using the four provided M20 pan-head thread-forming screws.

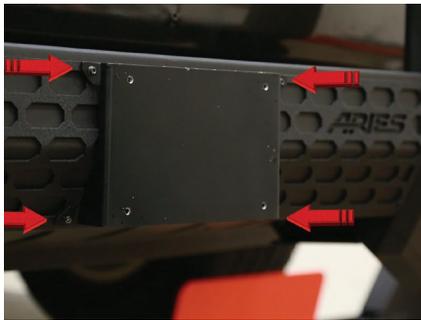

Step 2

Place the license plate up to the relocation bracket and attach using four Phillips-head M6 screws and provided flange nuts.



Step 3

Congratulations on the installation of your new ARIES AdvantEDGE™ bull bar license plate relocation bracket.

With the bracket installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

To protect your investment, see the 'Notes and Maintenance' section on the first page of this instruction manual.

