

# INSTALLATION INSTRUCTION



ITEM NO:4492

APPLICATION: 99-13 Chevy Silverado 1500/2500/3500 - Reg.Cab


## ATTENTION

1. Please read this installation instruction before installing this part.  
When install it, please pay attention to protecting your vehicles.
  
2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

## PARTS LIST


No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
①	Mount bracket 1		4	Lateral symmetry	⑩	Hex Bolt		6	M10x35
②	Mount bracket 2		2	Lateral symmetry	⑪	Lock washer		6	M10
③	Mount bracket 3		2		⑫	Flat washer		6	M10
④	Mount bracket 4		2		⑬	Hex nut		6	M10
⑤	Hex Bolt		4	M12*50 Teeth long:30	⑭	"T"Bolt		4	
⑥	Hex Bolt		2	M12*50	⑮	Flat washer		16	M6
⑦	Lock washer		6	M12	⑯	LOCK NUT		16	M6
⑧	Flat washer		6	M12					
⑨	Hex nut		6	M12					

**Driver Side Installation Pictured**

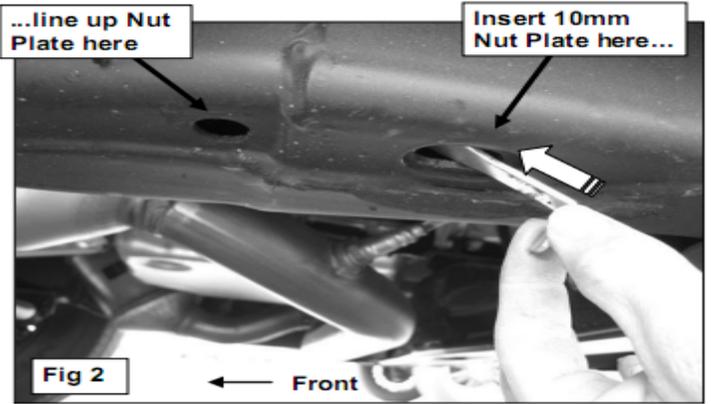


10mm x 30mm Hex Bolt  
 (2) 10mm Flat Washers  
 10mm Lock Washer  
 10mm Hex Nut

10mm Nut Plate  
 10mm x 30mm Hex Bolt  
 10mm Lock Washer  
 10mm Flat Washer

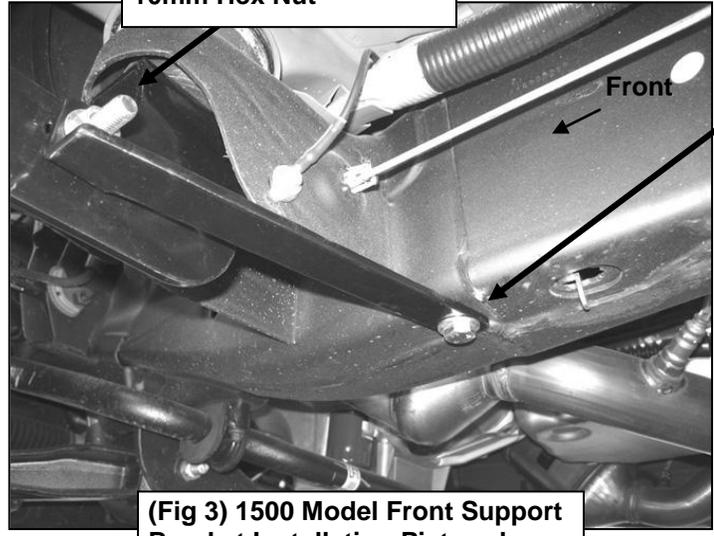


**(Fig 3) 1500 Model Front Support Bracket Installation Pictured**

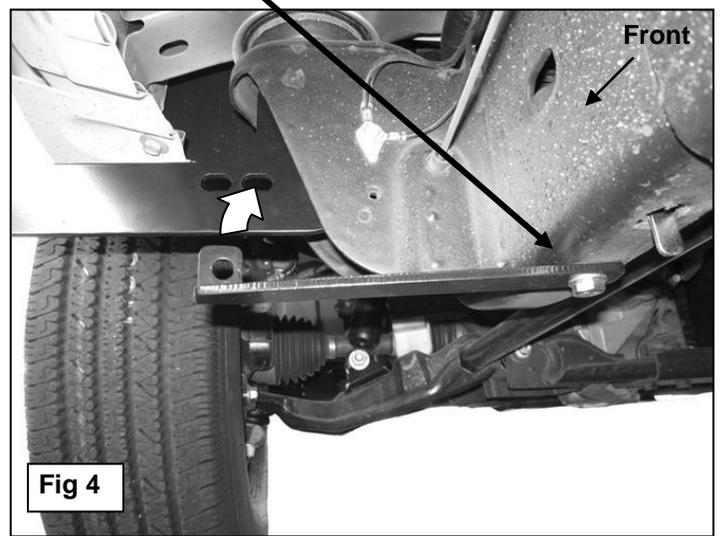


**IMPORTANT NOTE: 25-3500 Model Front Support Bracket Installation Pictured**  
 Bend Support Bracket up by hand to meet the Front Mounting Bracket.

**NOTE: Support Brackets not required on 2011 25-3500 Models**

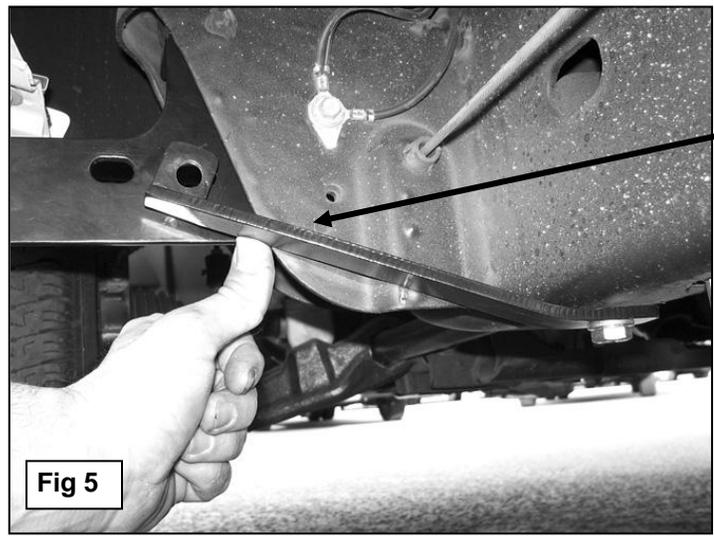

10mm x 30mm Hex Bolt  
 (2) 10mm Flat Washers  
 10mm Lock Washer  
 10mm Hex Nut

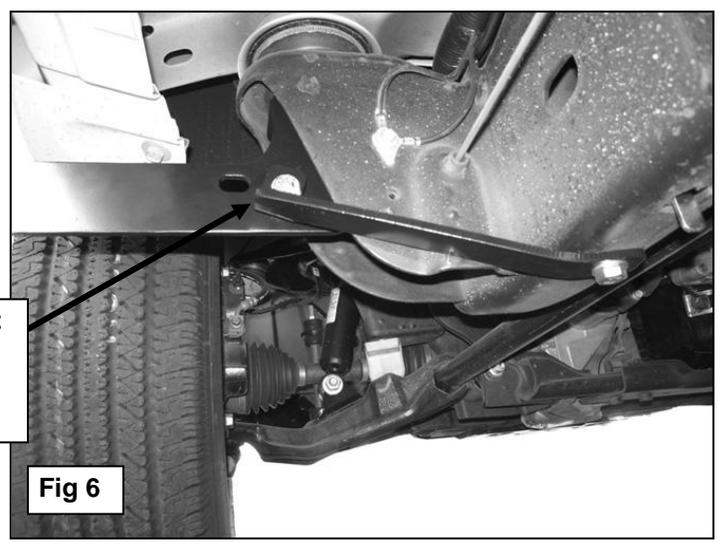


**NOTE: Support Brackets not required on 2011 25-3500 Models**

## Driver Side Installation Pictured


12mm x 30mm Hex Bolt  
(2) 12mm Flat Washers  
12mm Lock Washer  
12mm Hex Nut

NOTE: Support Brackets not required on 2011 25-3500 Models

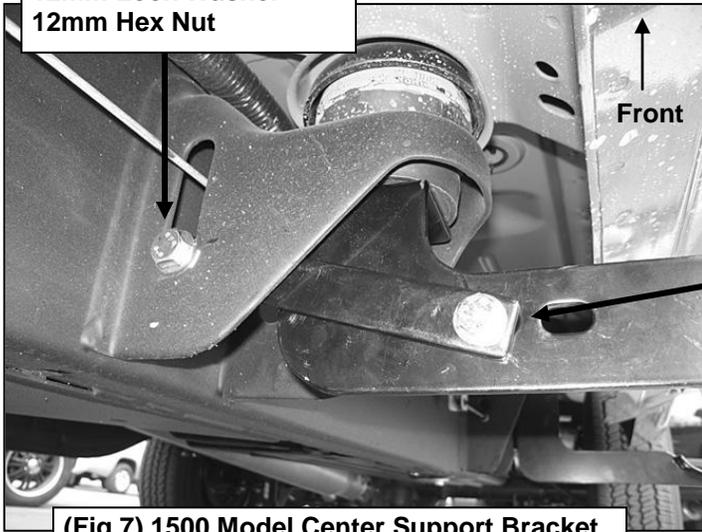

(Fig 7) 1500 Model Center Support Bracket Installation Pictured

10mm x 30mm Hex Bolt  
(2) 10mm Flat Washers  
10mm Lock Washer  
10mm Hex Nut

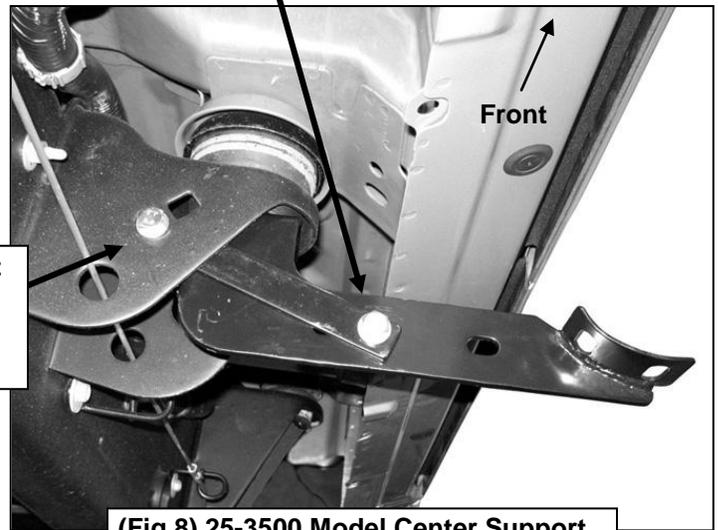

(Fig 8) 25-3500 Model Center Support Bracket Installation Pictured.

12mm x 30mm Hex Bolt  
(2) 12mm Flat Washers  
12mm Lock Washer  
12mm Hex Nut

NOTE: Support Bracket not required on 2011 25-3500 Models

