INSTALLATION INSTRUCTION ITEM NO:4502


APPLICATION: Dodge Ram 1500-Quad Cab 98-01


ATTENTION


- 1. Please read this installation instruction before installing this part. When install it, please pay attention to protecting your vehicles.
 - 2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.


PARTS LIST


No.	Name	Photo	Qty	Remarks	No.	Name	Photo	Qty	Remarks
A	Front Mount Bracket		2	lateral symmetry	Н	"T" Bolt		4	M10*35 (55*15*3.0)
В	Rear Mount Bracket		2	lateral symmetry	I	flat washer		12	M10
С	Support Bracket		4		J	Lock washer		8	M10
D	Hex Bolt		4	M12x 120	K	Hex Nut		8	M10
E	flat washer		4	M12	L	T″ Bolt		4	
F	Lock washer		4	M12	M	flat washer		16	M6
G	Hex Bolt		4	M10x30	N	LOCK NUT		16	M6

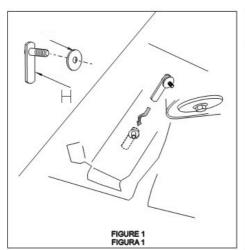

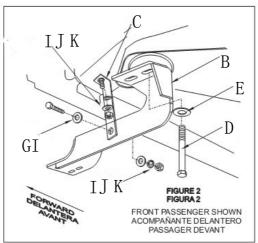

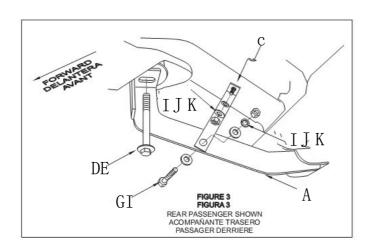

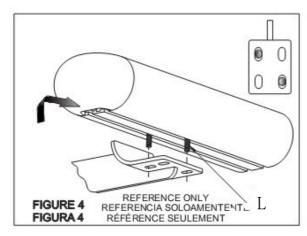

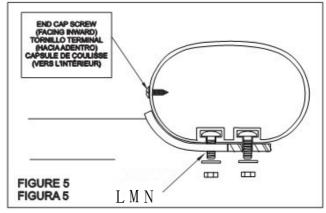

(INSTALLATION STEPS

- STEP 1: Check the parts in the box carfully if match above parts list.
- STEP 2:Pls prepare the tools for installation, follow as:12-14wrench, 17-19wrench.
- STEP 3:Put the Front mount bracket A and Rear mount bracket B into, SupportBracket C the girder of the car, and tighten it with D E F and G H I J K.
- STEP 4: Install the Side Step on the mount bracket A and the mount bracket B, with L M N.
- STEP 5:Test and make sure that the Side Step is steadily fixed.
- STEP 6:Installation is finished.