

# INSTALLATION INSTRUCTION




















## For Toyota Tundra Ext/Double Cab 99-06

### ITEM NO:4516

#### ATTENTION


1. Please read this installation instruction before installing this part.  
When install it, please pay attention to protecting your vehicles.
  
2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

#### PARTS LIST

| No | Name                                 | Photo   | Qty | Remarks          | No | Name        | Photo   | Qty | Remarks      |
|----|--------------------------------------|---|-----|------------------|----|-------------|---|-----|--------------|
| ①  | FRONT Mount Bracket                  |  | 2   | lateral symmetry | ⑪  | Lock Washer |  | 4   | M10          |
| ②  | REAR Mount Bracket                   |  | 2   | lateral symmetry | ⑫  | Hex Nut     |  | 4   | M10          |
| ③  | Support Bracket                      |  | 4   | lateral symmetry | ⑬  | Hex Bolt    |  | 4   | M8*30        |
| ④  | Hex Bolt                             |  | 2   | M12*50           | ⑭  | flat washer |  | 8   | 8. 4*24*1.6  |
| ⑤  | T Bolt                               |  | 2   | M12*50           | ⑮  | Lock Washer |  | 4   | M8           |
| ⑥  | Flat Washer                          |  | 6   | 12. 5*30*2. 5    | ⑯  | Hex Nut     |  | 4   | M8           |
| ⑦  | Lock Washer                          |  | 4   | M12              | ⑰  | "T" Bolt    |  | 4   |              |
| ⑧  | Hex Nut                              |  | 4   | M12              | ⑱  | flat washer |  | 16  | 6. 5*18*1. 2 |
| ⑨  | 10-1. 5*35 Special short Bolt Plates |  | 4   | M10              | ⑲  | Nylock Nuts |  | 16  | M6           |
| ⑩  | Flat Washer                          |  | 4   | 10. 5*26*2. 5    |    |             |   |     |              |


## Installation Diagram

Driver side Front Mounting Bracket

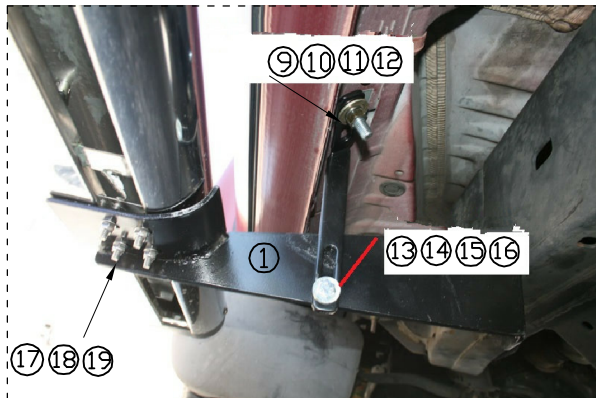


STEP 01

Driver side Rear Mounting Bracket

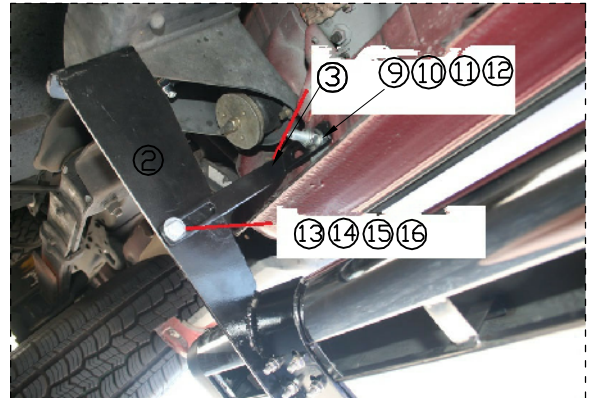

STEP 02

Driver side Rear Mounting Bracket

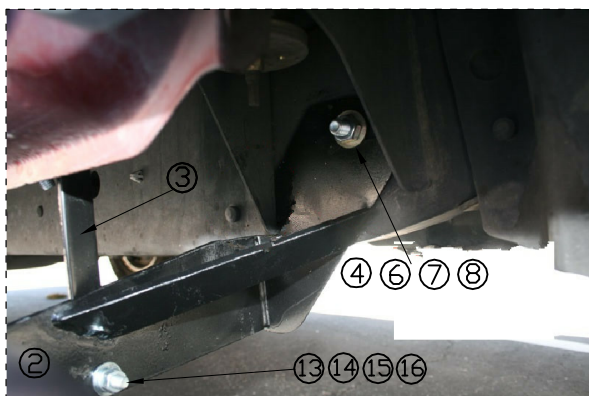

STEP 03

Driver Side Bar



STEP 04

### INSTALLATION STEPS

STEP 1: Check the parts in the box carefully if match above list .

STEP 2: Pls prepare the tools for installation, follow as: 10-12 wrench, 14-17 wrench .

STEP 3: Put the mount bracket into the girder of the car, and tighten it with ④⑤⑨.

STEP 4: Install the Side Bar to the mount bracket, and tighten it with ⑭.

STEP 5: Installation is finished.