

Parts List

1	Driver / left side bar
1	Passenger / right side bar
1	Driver / left front bracket
1	Passenger / right front bracket
1	Driver / left rear bracket
1	Passenger / right rear bracket
24	Hex bolt, M10 x 35mm
8	Hex nut, M10
24	Flat washer, M10 x 30mm OD x 1.5mm
8	Flat washer, M10 x 22mm OD x 2mm
24	Lock washer, M10
8	Clip nut, M10


Level of Difficulty

Easy



Scan for helpful install tips

Product Image

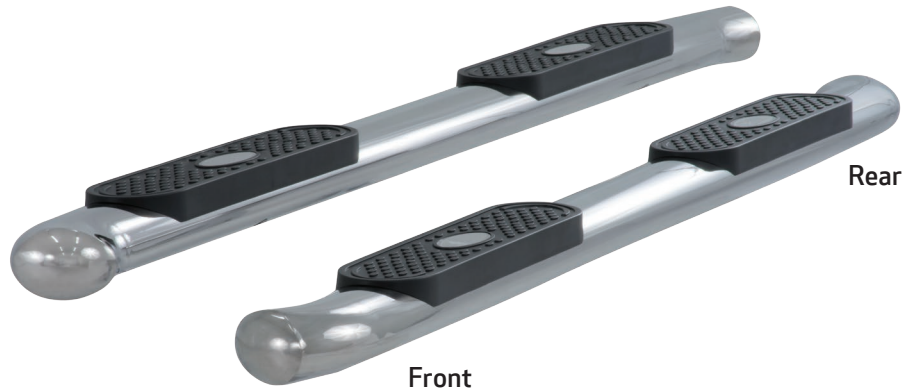

Tools Required


Ratchet	Torque wrench
Tape measure	Wrench, 17mm
Socket, 17mm	Level

Torque Specifications

	METRIC	SAE	
	M6 bolt		3 ft.-lbs.
	M8 bolt		7 ft.-lbs.
	M10 bolt		16 ft.-lbs.
	M12 bolt		28 ft.-lbs.
	1/4" bolt		3 ft.-lbs.
	5/16" bolt		7 ft.-lbs.
	3/8" bolt		16 ft.-lbs.
	7/16" bolt		20 ft.-lbs.
	1/2" bolt		28 ft.-lbs.

Use above torque setting unless otherwise noted

Brackets

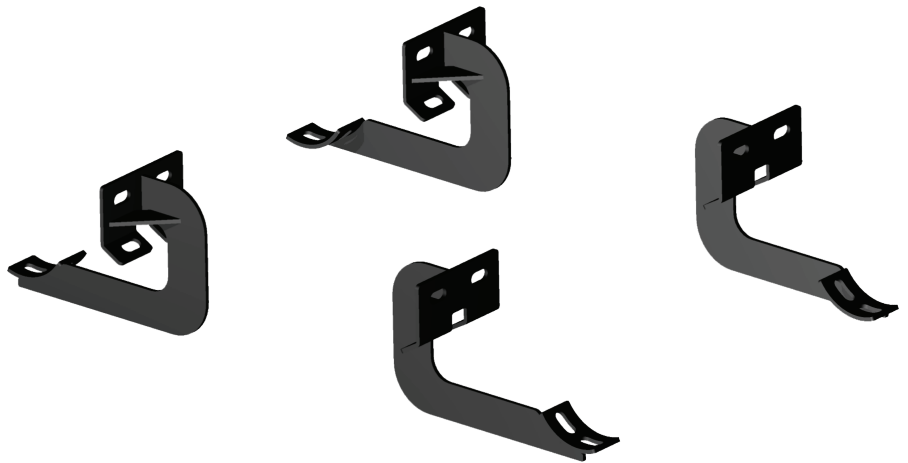

Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.



To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel and aluminum, polish may be used to clear small scratches and scuffs on the finish. Mild soap may be used also to clean the product.

Refer to the table to the left when securing hardware during the installation process to help prevent damage to the product or vehicle.

Step 1

Starting on the driver side, locate the three mounting locations along the body. This installation will use the front and rear mounting points.

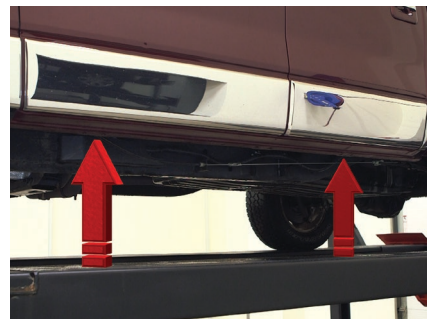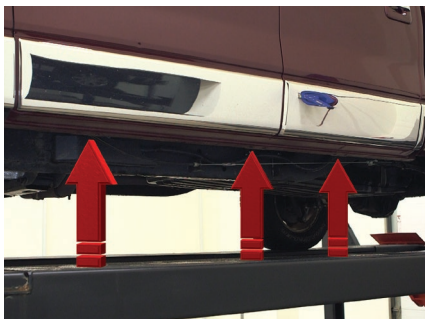

Step 2

The mounting brackets are specific to a front or rear mounting location. When mounting the brackets, have the cradle facing toward the middle of the truck for proper placement.



Step 3

Starting at the front, remove the factory tape or plug covering the mounting holes on the inner rocker panel.

Insert an M10 clip nut onto each mounting point.



Step 4

Lift the bracket into place and attach with an M10 hex bolt, locking washer and 30mm OD flat washer into the rocker panel and mounting tabs.

Snug the hardware, but do not fully tighten.




Step 5

Repeat this for the passenger-side bracket.



Step 6

To determine the front of the side bar, measure from the end of the side bar to the center of the rivet nut. This measurement should be 15 1/2".

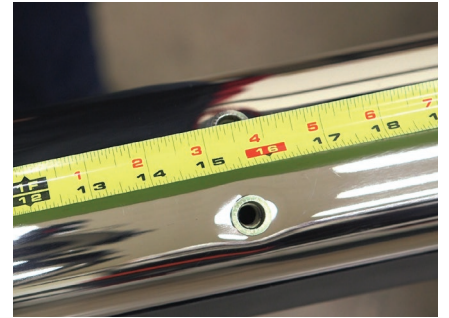

Step 7


Lift the new side bar into place and attach with an M10 bolt, locking washer and 22mm OD flat washer.



Step 8

Check for level and adjust if necessary.

Once aligned, tighten all hardware.

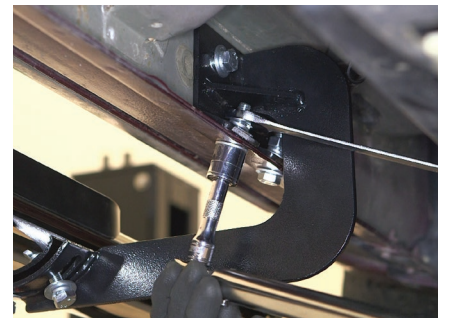

Step 9

Repeat this entire process on the passenger side.



Step 10

Congratulation on the installation of your new ARIES 4" oval side bars.

With the side bars installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

To protect your investment, see the 'Notes and Maintenance' section on the first page of this instruction manual.

