




# S223044-2 INSTALLATION MANUAL

## Parts List

1	Driver / left side bar
1	Passenger / right side bar
4	Mounting bracket, universal
12	Flat washer, M8
12	Flat washer, M8 nylon
12	Nylock nut, M8 x 1.25, CL8.8
8	Flat washer, 10mm
8	Lock washer, 10mm
8	Hex bolt, 10mm

## Tools Required

Ratchet	Level
Socket, 13mm	Socket, 16mm

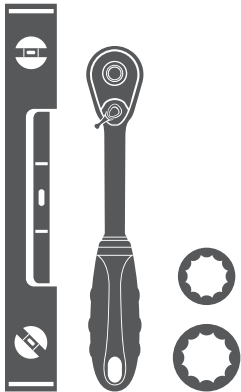

## Level of Difficulty

Easy



Scan for helpful install tips

## Product Image



## Brackets



## Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.


To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel and aluminum, polish may be used to clear small scratches and scuffs on the finish. Mild soap may be used also to clean the product.

### Step 1

Starting on the driver side, locate the two mounting locations on the inside of the rocker panel.

There will be three 8mm studs in each location to secure the brackets.

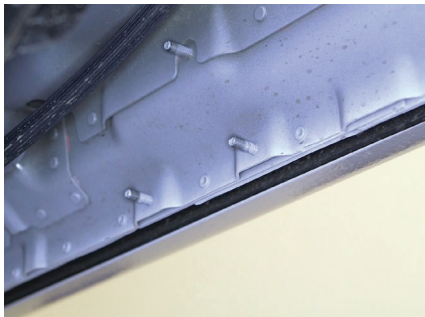

### Step 2

Locate the four mounting brackets. The mounting brackets are universal and will fit on both the driver and passenger sides.



### Step 3

Starting at the front, place a nylon washer over the factory bolts, followed by the bracket.

Note: It is important to install the nylon washers first to prevent a corrosion effect from the aluminum body and steel bracket.



### Step 4

Add an 8mm flat washer, and secure with a nylock nut.

Snug the hardware with a 13mm socket, but do not fully tighten.



### Step 5

Repeat steps 3 and 4 to install the rear bracket on the driver side mounting locations.

Snug the hardware, but do not fully tighten.



### Step 6

Carefully place the side bar onto the brackets and ensure the rivet nuts on the bottom of the side bar line up with the brackets.

Attach the side bar to the brackets using the supplied 10mm hex bolt, lock washers and flat washers.

Snug the hardware, but do not fully tighten.



### Step 7

With all the hardware installed, we recommend tightening all of the vehicle connections first, followed by the side bar connections.

Check for level and adjust if necessary.

Once aligned, tighten all hardware.

Repeat this entire process on the passenger side.



### Step 8

Remember to do periodic inspections to make sure that all hardware is secure and tight.

To protect your investment, we recommend you apply a layer of nonabrasive wax.

Congratulations on the installation of your brand new Aries 4" oval side bars.

