

# INSTALLATION MANUAL

## S225044-2

### Level of Difficulty

Easy

### Parts List

1	Driver / left running board
1	Passenger / right running board
6	Mounting bracket, universal
12	Hex bolt, M10
12	Flat washer, M10
12	Lock washer, M10
18	Nylock nut, M8
18	Flat washers, M8

### Tools Required

Ratchet	Torque wrench
Socket set	Level

### Torque Specifications

	Metric	SAE
	M6 bolt	3 ft.-lbs.
	M8 bolt	7 ft.-lbs.
	M10 bolt	16 ft.-lbs.
	M12 bolt	28 ft.-lbs.
	1/4" bolt	3 ft.-lbs.
	5/16" bolt	7 ft.-lbs.
	3/8" bolt	16 ft.-lbs.
	7/16" bolt	20 ft.-lbs.
	1/2" bolt	28 ft.-lbs.

Use above torque setting unless otherwise noted


### Product Registration

CURT Group stands behind our products with industry leading warranties. You can help us continue to improve our product line and help us understand your needs by registering your purchase by visiting:


[warranty.curtgroup.com/surveys](http://warranty.curtgroup.com/surveys)

At CURT Group, customer is king. We value your feedback and we use that information to make improvements on our products. Please, take a minute and let us know how we are doing.

### Product Photo

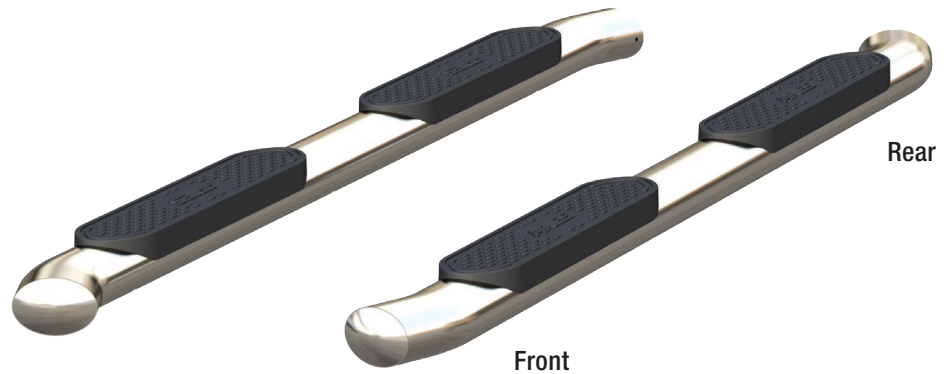

### Brackets and Hardware

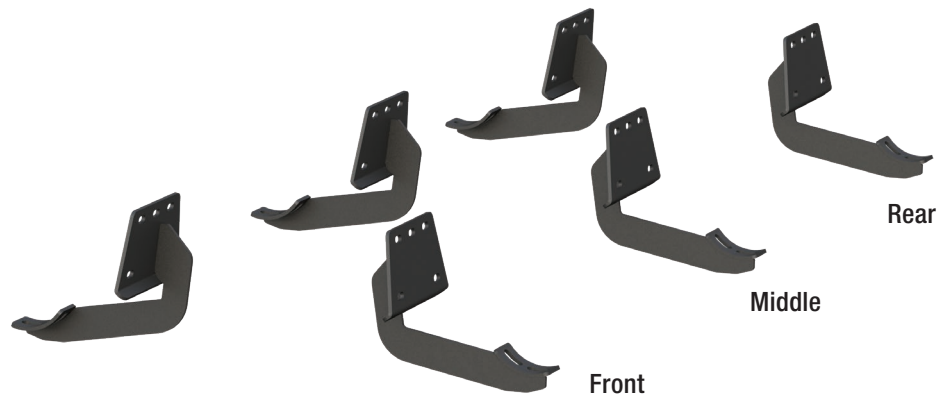

### Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For polished, gloss and other smooth finishes, polish may be used to clear small scratches and scuffs on the finish.

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Refer to the table to the left when securing hardware during the installation process to help prevent damage to the product or vehicle.

### Step 1

Beginning on driver side, locate the three mounting tabs along the bottom edge of the vehicle.

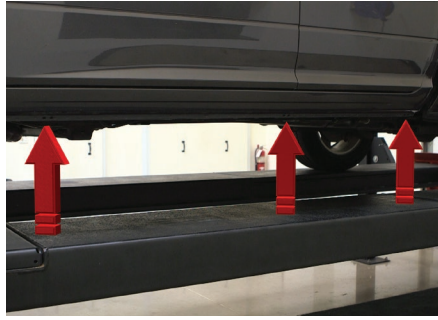

### Step 2

Starting at the front mounting location, remove any debris from the factory studs.

Attach a mounting bracket using an M8 nylock nut and flat washer.

Repeat this process for the middle and rear mounting locations.

Snug the hardware, but do not fully tighten.



### Step 3

Place the driver-side side bar onto the mounting brackets and align the mounting points. Ensure the rivet nuts on the bottom of the side bar line up with the brackets.

Secure the side bar to the brackets using a M10 hex bolt, lock washer and flat washer at each mounting location.

Snug the hardware, but do not fully tighten.

Repeat steps 1 through 3 for the front, middle and rear mounting locations on the passenger side.



### Step 4

Congratulations on the installation of your new ARIES 4" oval side bars.

With the side bars installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

To protect your investment, see the 'Notes and Maintenance' section on the first page of this instruction manual.

