



# INSTALLATION INSTRUCTIONS

## Front Receiver Kit Kit no. 61768 for Jeep Grand Cherokee

As you read these instructions, you may see **NOTES**, **CAUTIONS** and **WARNINGS**. Each message has a specific purpose. **NOTES** are additional information to help you complete a procedure. **CAUTIONS** are safety messages that indicate a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. A **CAUTION** may also be used to alert against unsafe practice. **WARNINGS** are safety messages that indicate a potentially hazardous situation, which, if not avoided could result in serious injury. **CAUTIONS** and **WARNINGS** identify the hazard, indicate how to avoid the hazard, and advise of the probable consequence of not avoiding the hazard. **PLEASE WORK SAFELY!**

**Note:** This installation requires enlarging factory-provided holes in the unibody. Follow the instructions step by step for fastest installation.

PART NO.	QUANTITY	DESCRIPTION
61767	1	Assembly, Receiver
62202	2	Plate, Load
36631	1	Plug, Receiver

### TORQUE SPECIFICATIONS

BOLT SIZE  
7/16 inch

TORQUE  
50 lb. ft. (67.8 N-m)

1. Remove the plastic fasteners from the ends of the bumper. Pull the splash shields away from the bumper, and unplug the wiring/bulbs from the back of the lower lights. **See Photo 1.**

### PHOTO 1



2. Remove the screws from the top corners of the bumper. **See Photo 2.**

**PHOTO 2**



3. Remove the three plastic fasteners from the bottom of the bumper. Pry the center pins out first, then pull out the collars.
4. Remove the screws from the front of the grille. **See Photo 3.**

**PHOTO 3**




5. Remove the screws from the top of the grille, and remove the grille and bumper from the vehicle.
6. Detach the thin-gauge sheet metal piece from the unibody. **See Photo 4.**

## PHOTO 4



7. Remove the stamped steel air deflector plate. See Photo 5 for part identification.

## PHOTO 5

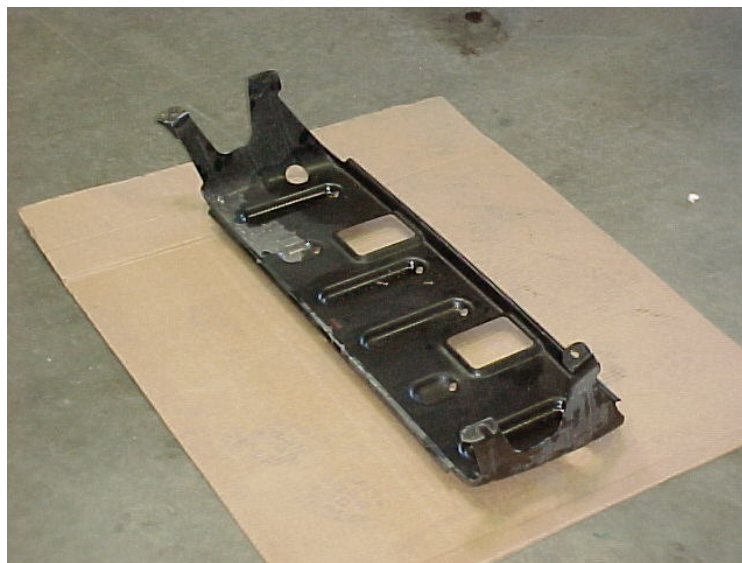

8. Attach the front receiver to the frame rail-like areas of the unibody. Use the provided  $\frac{1}{4}$  inch shims between the receiver and the unibody. See Photo 6 for position of shims. **NOTE: The front receiver mounts at factory-provided holes, but the back holes must be made larger to accept the  $\frac{7}{16}$  inch fasteners. Be sure to install the load distribution plates inside the pockets in the unibody. See Photo 7. SECURELY TIGHTEN ALL FASTENERS.**




### **WARNING**



Drilling operations can cause flying metal chips. **WEAR SAFETY GOGGLES.** Flying metal chips can cause eye injury.

**PHOTO 6**

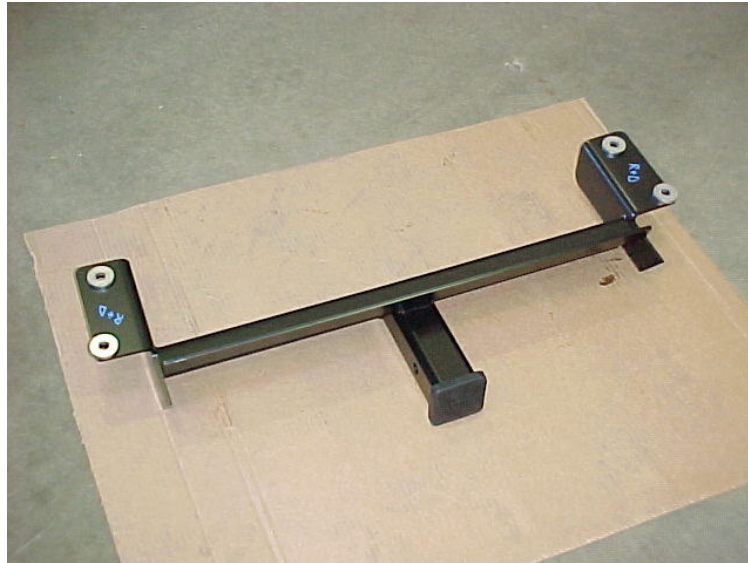

**PHOTO 7**



9. Reattach the thin-gauge sheet metal piece to the unibody. Install the bumper and the grille.