



FITTING INSTRUCTIONS

Part Number: 2815020 / 2815010

Product Description: RECOVERY POINT

Suited to vehicle/s: TOYOTA LAND CRUISER 200
SERIES

Please place these instructions in vehicle glovebox when complete.

WARNING

REGARDING VEHICLES EQUIPPED WITH SRS AIRBAG;

When installed in accordance with these instructions, the vehicle protection panels do not affect operation of the SRS airbag.

ALSO, NOTE THE FOLLOWING:

- ◆ This product must be installed exactly as per these instructions using only the hardware supplied.
- ◆ Do not use this product for any vehicle make or model, other than those specified by ARB.
- ◆ Do not remove labels (if any) from this product.
- ◆ This product or its fixing must not be modified in any way.
- ◆ The installation of this product may require the use of specialized tools and/or techniques
- ◆ These instructions are correct as at the publication date. ARB Corporation Ltd. cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components
- ◆ Work safely at all times
- ◆ Unless otherwise instructed, tighten fasteners to specified torque

ARB 4x4 ACCESSORIES

Corporate Head Office

42-44 Garden St
Kilsyth, Victoria
AUSTRALIA 3137

Tel: +61 (3) 9761 6622
Fax: +61 (3) 9761 6807

Australian enquiries
North & South American enquiries
Other international enquiries

sales@arb.com.au
sales@arbusa.com
exports@arb.com.au

www.arb.com.au

IMPORTANT INFORMATION. GENERAL CARE AND MAINTENANCE

By choosing an ARB Recovery Point, you have bought a product that is one of the most sought after 4WD products in the world. Your recovery point is a properly engineered, reliable, quality accessory that represents excellent value. To keep your recovery point in original condition it is important to care and maintain it following these recommendations:



As part of any Pre Trip Preparation, or on an annual basis, it is recommended that a thorough visual inspection of the recovery point is carried out, making sure that all bolts and other components are torqued to the correct specification. Replace any components as necessary. This service can be performed by your local authorised ARB Stockist.

FITTING REQUIREMENTS

REQUIRED TOOLS FOR FITMENT OF PRODUCT:

BASIC TOOL KIT	
TORQUE WRENCH	

HAVE AVAILABLE THESE SAFETY ITEMS WHEN FITTING PRODUCT:

Protective eyewear	
Hearing protection	

NOTE: 'WARNING' notes in the fitting procedure relate to OHS situations, where to avoid a potentially hazardous situation it is suggested that protective safety gear be worn or a safe work procedure be employed. If these notes and warnings are not heeded, injury may result.

FASTENER TORQUE SETTINGS:

SIZE	Torque Nm	Torque lbft
M12x1.25 Gr10.9	120	88

PARTS LISTING

APPLICATION.	PART NO.	QTY.	DESCRIPTION.
FIT RECOVERY POINT	3194621	1	RECOVERY POINT LC 200 SERIES
	4581049	2	WASHER FLAT 1/2"
	6151679	2	BOLT HEX HD M12x1.25x60 Gr 10.9
SAFETY	2125484	1	RECOVERY POINT WARNING LABEL
	211433	1	VEHICLE RECOVERY BOOKLET
	211512	1	OPERATIONS INSTRUCTION CARD

FITTING PROCEDURE



RH factory tow hook

1. Remove factory tow point.

Note: Recovery point can be installed on either driver's side or passenger side.



Recovery point LHS shown

2. Fit recovery point to vehicle chassis using hardware supplied with kit.



M12x1.25 Gr10.9 - 120Nm


**NOTE: Orientation of recovery point.
LHS fitment shown.**



LHS shown fitted with ARB bull bar

3. Apply recovery point warning label in the position outlined.

FITTING PROCEDURE

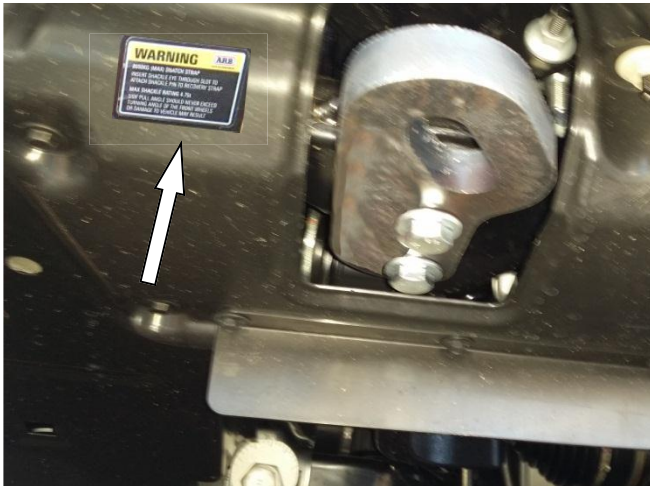

LHS shown fitted with factory bar

FITTED PRODUCT



NOTE: ARB bull bar fitted, ARB UVP system fitted.

Two recovery point kits shown. Single recovery point supplied in each kit.