

### JEEP 2020-21 Gladiator JT Bed Front Molle Panel Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

#### Kit Contents:


- Front Dr Molle Panel x1
- Front Pass Molle Panel x1
- Front Center Molle Panel x1
- L-Brackets x2
- Top Brackets x2

#### Tools Needed:

- 4mm Allen Wrench
- 5mm Allen Wrench
- 10mm Wrench
- 13mm Wrench
- T45 Torx Bit

#### Hardware Included:

- 8MM-1.25X25MM Bolts x10
- 8MM-1.25 Lock Nuts x6
- 8MM Flat Washers x16
- 8MM Clip Nuts x2
- 6MM-1.0x20MM Bolts x4
- 6MM-1.0 Lock Nuts x2
- 6MM Flat Washers x6

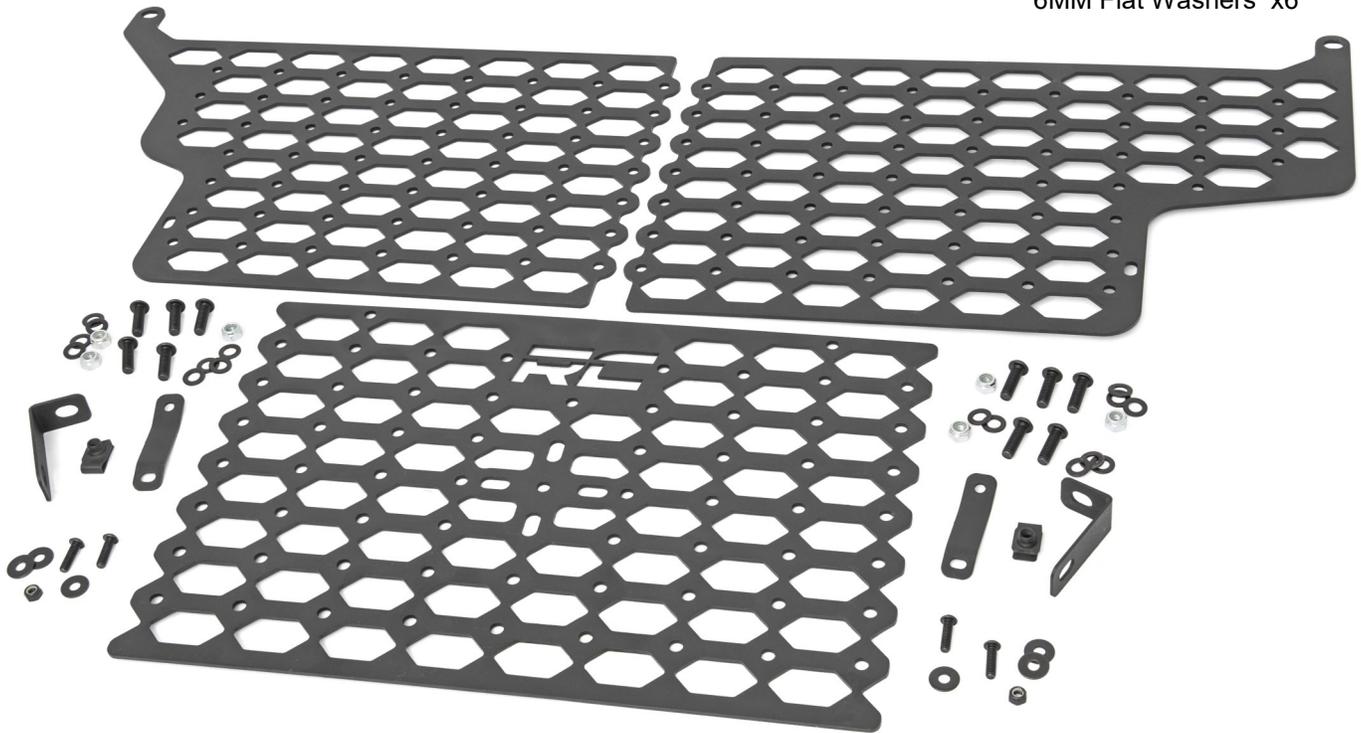


#### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs



## INSTALLATION INSTRUCTIONS


1. Assemble the 3 pieces of the molle panel with the 8mm bolts, nuts, and washers using a 5mm Allen wrench and 13mm socket/wrench and place the panel in the front of the bed. **See Photo 1.**
2. Remove the stock tie down ring from the driver and passenger sides using a T45 Torx bit. **See Photo 2.**

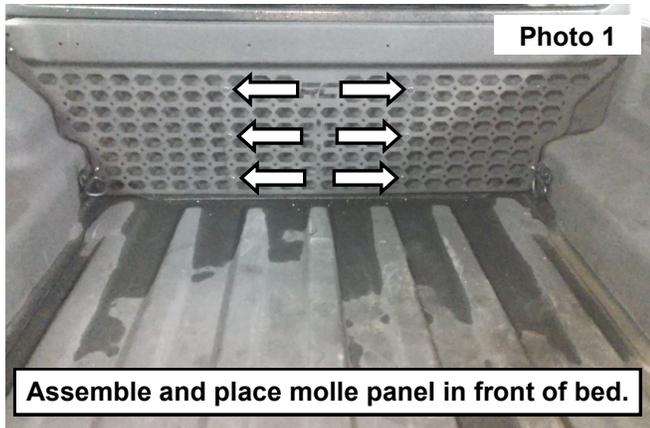

3. Install the L-brackets on the lower corners of the molle panel using the supplied 8MM bolts and clip nuts. Tighten using a 5mm Allen wrench. **See Photo 3.**
4. Align and install the upper corners using the supplied 8MM bolts and a 5mm Allen wrench. **See Photo 4.**



5. Reinstall the stock tie down ring through the L-bracket with stock hardware using T45 Torx bit. **See Photo 5.**
6. Install the front top brackets using the supplied 6mm bolts, nuts, and washes using a 4mm Allen wrench and 10mm wrench. **See Photo 6.**

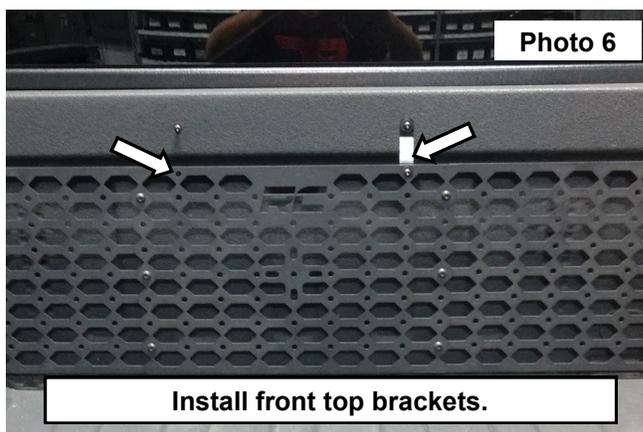

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

