

ROUGH COUNTRY

SUSPENSION SYSTEMS®



10761BAG5

Chevrolet Silverado 1500 2007-18 EXO Bumper

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go. If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

▲ NOTICE Rough Country LED lights are for off-road use only.

If factory equipped, winch bumper may interfere with parking, proximity and external cruise control sensors.

KIT CONTENTS:

- 1-EXO Front Bumper W / Light mount
- 2- 2" Flush Mount LED Cubes
- 1- Dual Row 20" LED
- 2- Frame Brackets
- 2-D-rings
- 2-Large Frame Washers

HARDWARE INCLUDED:

- 2-12mm x 120mm Bolts
- 10-1/2" Flat Washers
- 4-1/2" Lock Washers
- 4-1/2" x 3 1/2" Bolts
- 4-1/2" Nylock Nuts
- 4-12mm x 35mm Bolts
- 4-12mm Flat Washers
- 4-12mm Flange Lock Nuts
- 2-Sleeves

TOOLS NEEDED:

- Pry Tool/Flat Head Screwdriver
- 15mm Socket/Wrench
- 16mm Socket/Wench
- 18mm Socket/Wrench
- 19mm Socket/Wrench


INSTALLATION INSTRUCTIONS

1. Place the vehicle in park and remove the factory tow hooks from the frame using a 18mm socket.
2. Locate the supplied frame bracket and install in the bumper with the supplied 12mm x 120mm bolt, 1/2" flat washers and 1/2" lock washer. Do not fully tighten at this time. **See Photo 1 & 2.**

Photo 1



Photo 2

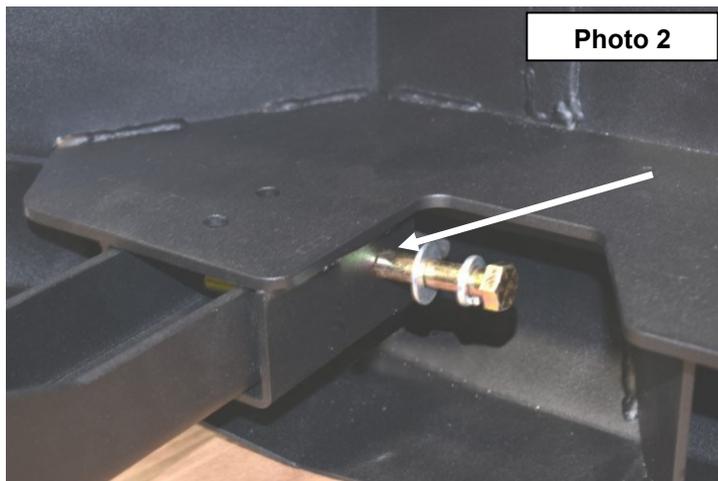

3. Install the supplied 1/2" x 3 1/2" bolts in the frame bracket as shown with the flat washers and lock nuts. **See Photo 3.**

Photo 3



- Position the new bumper and brackets in the frame with the supplied sleeve in the bracket. Secure using the factory bolt and nut. **Photo 4.**
- Locate the supplied 1/2" x 1 1/2" bolts, lock washers and large flat washer and install as shown in **Photo 5.**

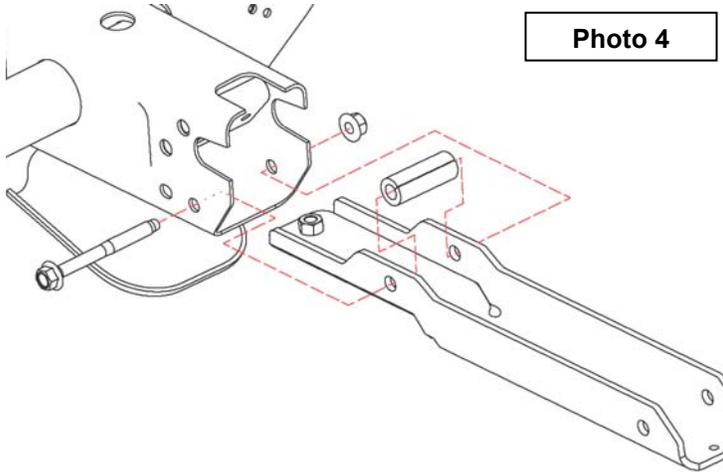


Photo 4



Photo 5

- Install the light bar in the mount with instructions included in light bar kit. **See Photo 6.**
- Install the light bar mount on the bumper with the supplied 12mm x 35mm bolts, flat washers and lock nuts. **See Photo 7.**



Photo 6



Photo 7

- Position the bumper and tighten the 1/2" hardware with a 3/4" wrench and the 12mm hardware with a 18mm wrench.
- Install the supplied d-rings.
- Install the flush mount lights and winch per instructions included in corresponding kits.

Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

