

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

### GM 2019-21 1500 Crew Cab Aluminum Step Extrusion Brackets

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

#### Kit Contents:

Step Rails x2  
 Front End Caps x2  
 Rear End Caps x2  
 Dr Side Brackets x3  
 Pass Side Brackets x3  
 Steps x4

#### Tools Needed:

13mm Socket/Wrench  
 5mm Allen Wrench

#### Hardware Included:

8mm x 25mm Bolts x48  
 8mm Oversized Washers x12  
 8mm Lock Nuts x30  
 8mm Finish Nuts x12  
 8mm x 10mm Button Head x12



#### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

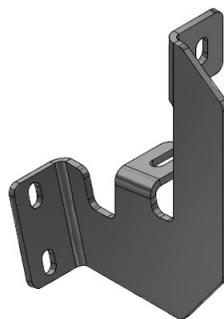


Photo a



**Dr Side Bracket**

Photo b





**Pass Side Bracket**



## INSTALLATION INSTRUCTIONS

**NOTE:** Instructions on the rail below are shown installing components from the front and sliding toward the rear of the rails.



1. Install two 8mm x 25mm bolts in the upper and lower slots on the side of the rail and push toward rear. **See Photo 1.**
2. Loosely install the 8mm x 25mm bolts and flange nuts in the step and slide the step onto the rail from front to rear. **See Photo 2 and Photo 3.**

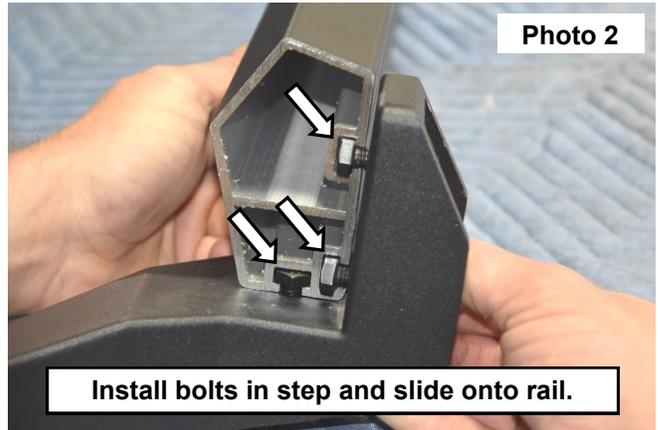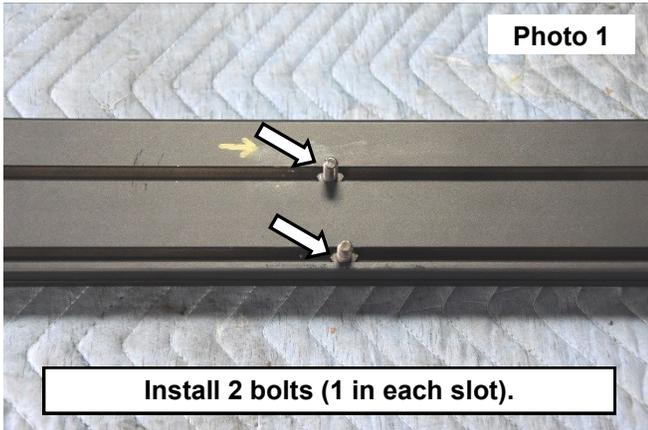



3. Install two more 8mm x 25mm bolts in the rail from front to rear. **See Photo 4.**

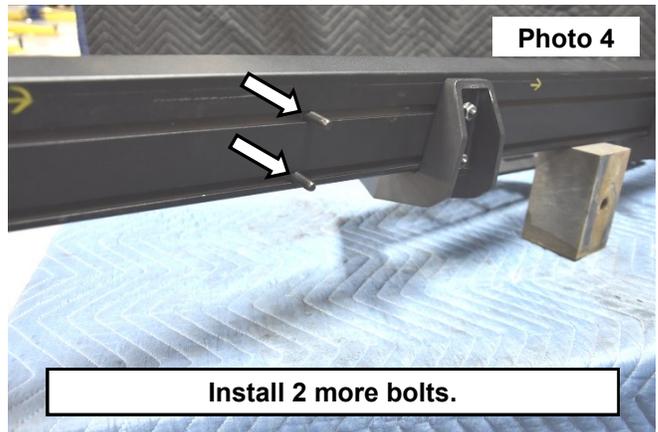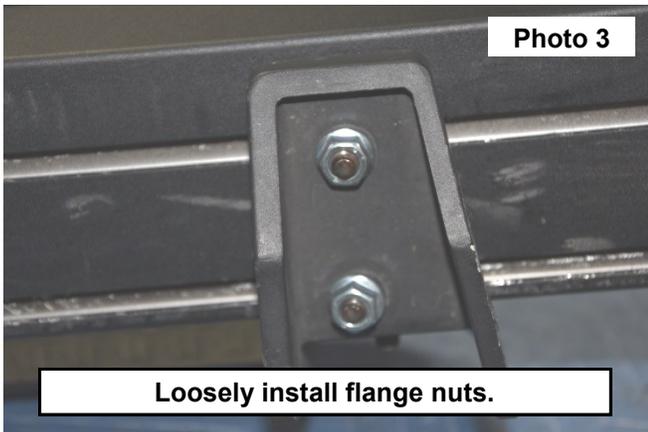


4. Install the front steps with 2 bolts in between. **See Photo 5.**
5. Remove factory steps if equipped and install the brackets (Photo a or Photo b on Page 2 for Dr and Pass sides) with the 8mm x 25mm bolts and 8mm oversized washers using a 13mm socket/wrench. **See Photo 6.**

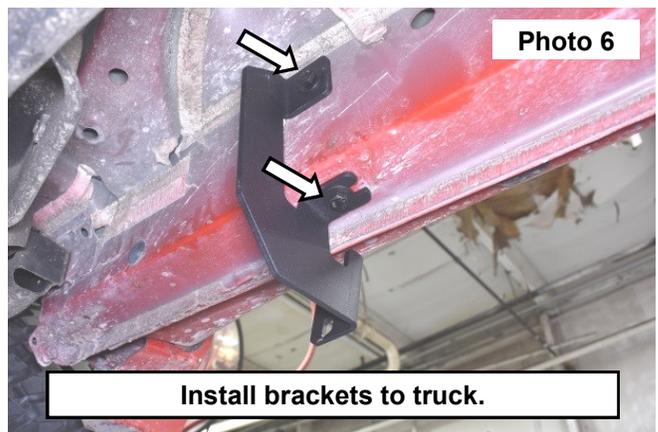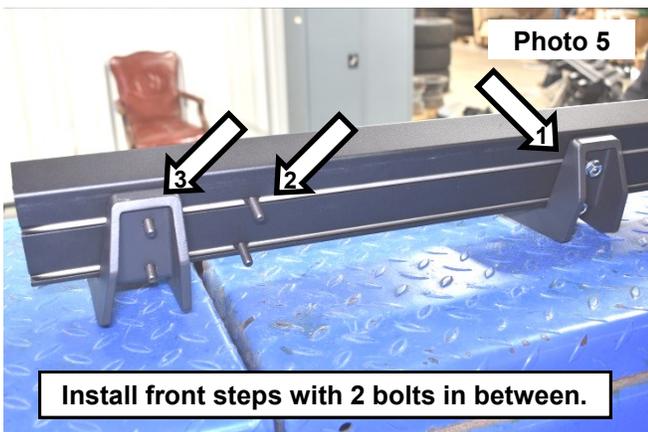

6. Install the steps to the brackets using the supplied 8mm lock nuts and 13mm socket/wrench. **See Photo 7.**
7. Install 3 finishing nuts in the end of the rail. **See Photo 8.**

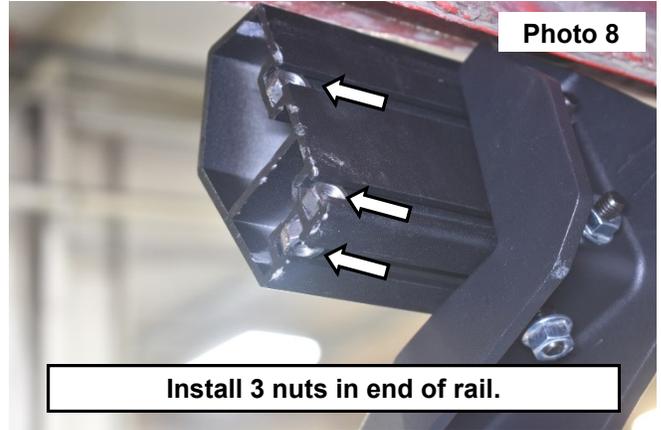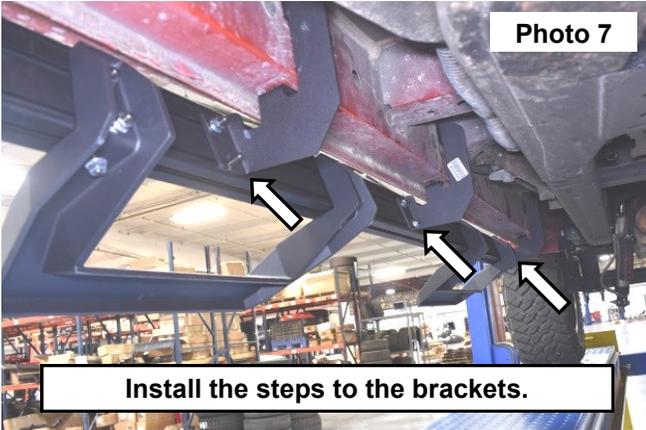

8. Install the end cap with the 8mm x 10mm bolts using a 5mm Allen wrench. **See Photo 9.**
9. Adjust the rails and steps to the desired location and fully tighten hardware. **See Photo 10.**

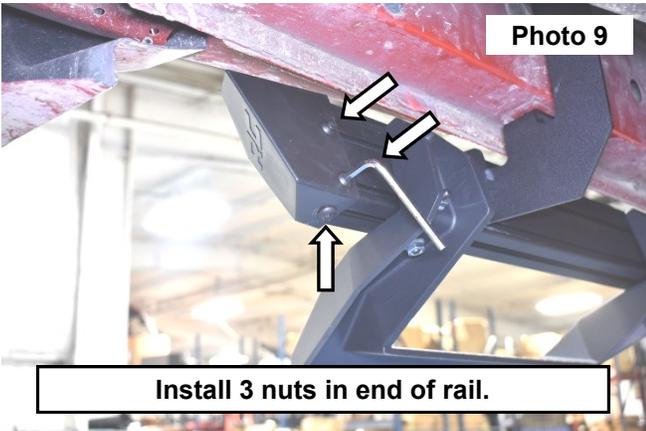

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

