

ROUGH COUNTRY

SUSPENSION SYSTEMS®

FORD 2021-22 Bronco Rock Sliders

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:

Driver Side Rock Slider x1
 Pass Side Rock Slider x1
 Front Brackets x2
 Center Brackets x2
 Rear Brackets x2

TOOLS NEEDED:

10mm Wrench or Socket
 13mm Wrench or Socket
 17mm Wrench or Socket

HARDWARE INCLUDED:

6mm Bolt Plate x6
 6mm Lock Nuts x12
 6mm Flat Washers x12
 8mm x 25mm Hex Bolts x24
 10mm x 30mm Hex Bolts x6
 10mm Flat Washers x6




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTONS



1. Install the (3) drivers side brackets onto the rock slider using (4) of the supplied 8mm bolts. Tighten using a 13mm socket. (Front, Center and Rear brackets differ in shape and position) **See Photos 1 and 2.**

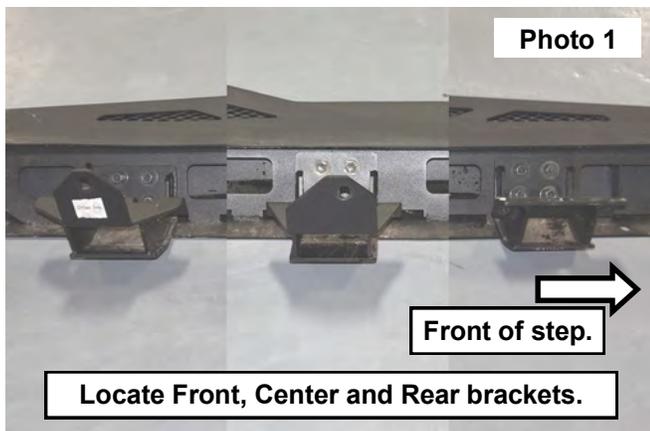

2. Support and Place the rock slider onto the vehicle. Align the mounting holes in the rock slider with the holes in the body. **See Photo 3.**
3. Secure the bracket to the body mount using the 10mm bolt in the upper center hole of the brackets hand tighten. **See Photo 4.**

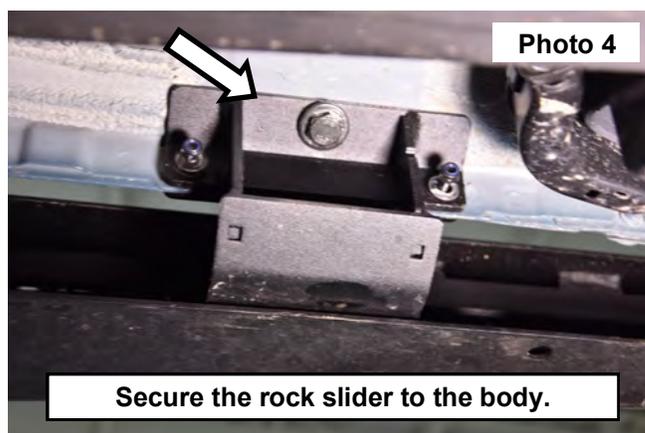

4. Place the bolt plate through the rocker into the bracket and secure using (2) of the supplied 6mm flat washers and (2) 6mm lock nuts onto the studs. Tighten using a 10mm socket. **See Photo 5.**
5. Repeat the installation of the bolt plates on the remaining brackets.
6. Tighten the body bolts using a 17mm socket. **See Photo 6.**

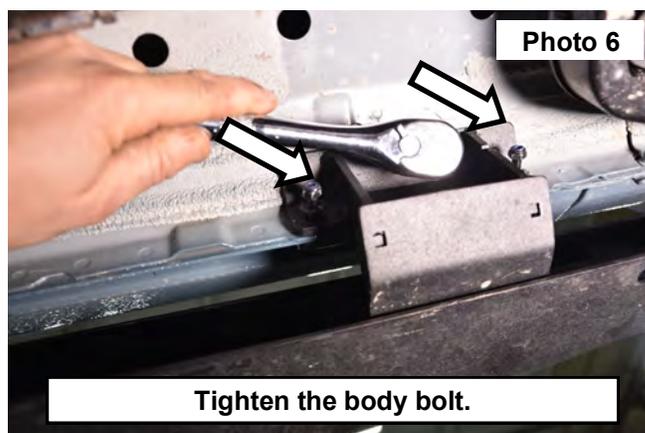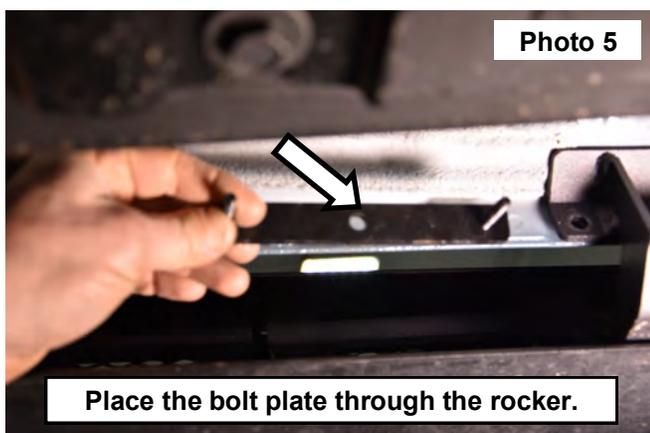

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

