

Chevrolet Silverado 2019-21 1500 Front Fascia

Thank you for choosing Rough Country

Please read instructions before beginning installation. Check the kit hardware against the parts list and product layout. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

If questions exist we will be happy to answer any questions concerning the design, function, and correct use of this product.

▲ NOTICE Painted fascia cannot be returned.

Kit Contents:

- 1- Front Fascia
- 2-Quad Row White/Amber Lights
- 1-Rubber Edging
- 7-Push Pins



Tools Needed:

- Marker
- 3/8" Drill
- Drill Motor

INSTALLATION


1. Place vehicle on a flat surface and set emergency brake.
2. Using a marker, mark the plastic bumper at the bottom outside corner of each fog light hole. **See Photo 1.**
3. Using a 3/8" drill, drill the holes for the light wires where marked in step 2, **take care that you are not drilling into anything behind the plastic bumper. See Photo 2.**



4. Lay the fascia on a flat surface and run the wiring for the supplied light strips, through the lower slots with the passenger side wiring through the outside slots and driver side through the inside slots to match the light pattern from side to side. **See Photo 3** showing passenger side.
5. Carefully remove the adhesive backing and place the light slightly into the slot. **See Photo 4.**



6. Carefully arch the light in the middle so that you can slide the opposite end into the slot of the fascia. **See Photo 5.**
7. Make sure the outside of the light housings are not showing and firmly press on the light, all the way across, to secure the adhesive to the fascia. **See Photo 6.**

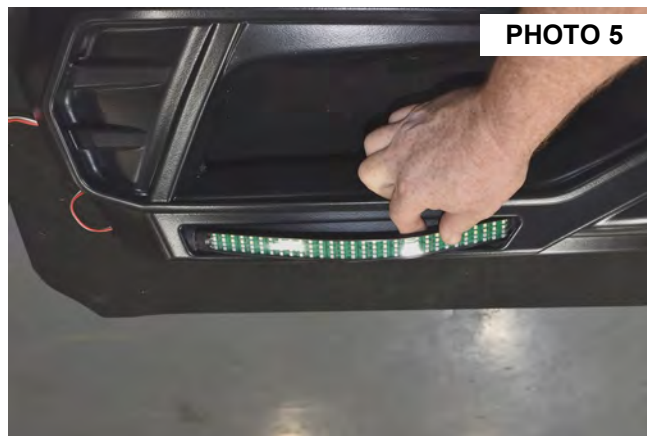

8. Install the supplied rubber weather stripping around the top edge of the fascia. You will need to remove the adhesive backing and firmly press the edging onto the fascia. Trim the ends as needed. **See Photo 7.**
9. Hold the fascia up to the front bumper. Run the wires through the holes drilled in step 3, on both sides of the bumper. **See Photo 8.**



10. The lights can be spliced to either your running light or fog light wires. Also, there is an Amber row of lights that can be spliced into your turn signal wires.

White wire - Ground wire

Red wire - Clear LEDs

Brown wire - Turn signal

10. You may need another person to help perform this setup. Align the fascia on the front bumper and hold firm pressure while drilling the 7 3/8" holes. **See Photos 9-11.**



11. Using the supplied push pins, secure the fascia to the front bumper using the holes drilled in step 11.



POST INSTALLATION INSTRUCTIONS

1. Check hardware at 50 miles and again at 500 miles. Periodically check all hardware for tightness and replace pins is damaged or missing.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

