

Universal Turn Signal and Side Mirror Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:

- Power Input Harness x1 Set
- Side Mirror x1 Set
- Side Mirror Harness x1 Set
- Amber Turning Signal x2
- Switch Harness x1 Set
- Signal Rock Switch x1
- Left/Right Rock Switch x1
- Signal Harness x1 Set
- Signal and Horn Harness x1 Set
- Horn x1
- Horn Switch x1
- Horn Harness x1 Set
- Bracket Mounts x1 Set

TOOLS NEEDED:

- Screw Driver
- Drill
- Step Drill Bit

HARDWARE INCLUDED:

- 75mm x 44mm Rubber Pad x2
- 60mm x 44mm Rubber Pad x2
- Hardware bag x1





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS

1. Secure the main board in a central location on the UTV using screws or 3M tape. **See Photo 1 and Photo 2.**

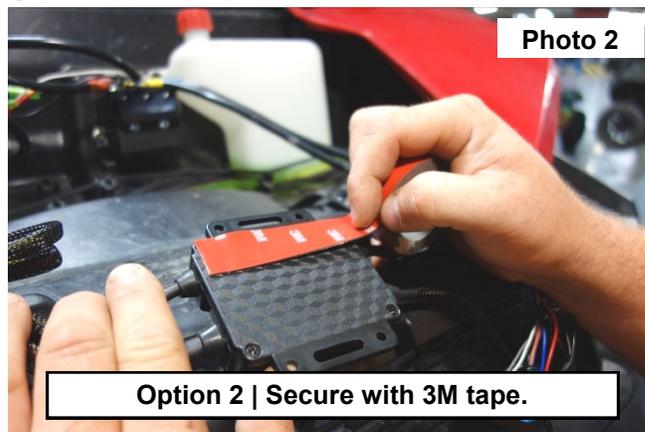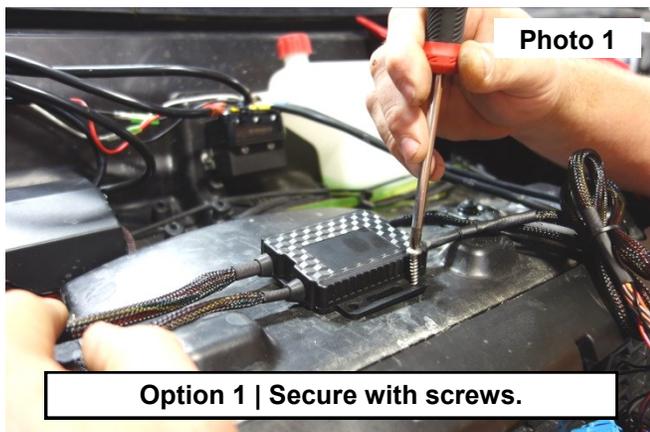

2. Install the black wire to the negative (-) terminal and the red wire to the positive (+) terminal on the battery. **See Photo 3 and Photo 4.**

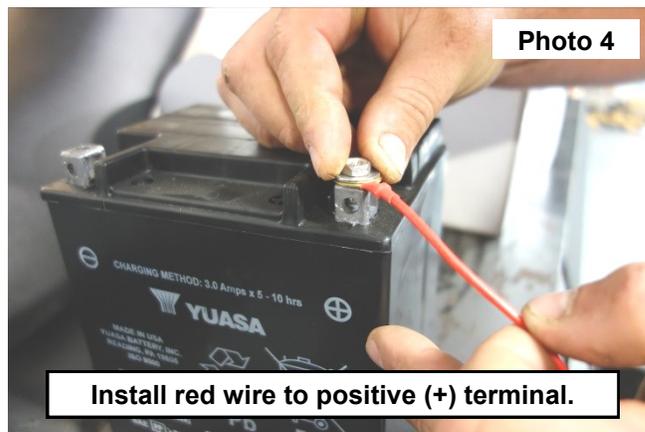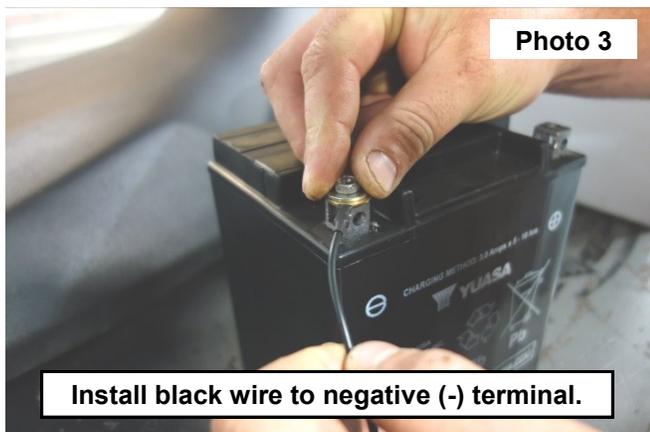



3. Install the male and female plugs for the switch. **See Photo 5.**
4. Install the switch into the knock out locations on the dashboard. **See Photo 6.**




5. Drill out the added accessory location. **See Photo 7.**
6. Insert the horn push button and thread into the hole. **See Photo 8.**



7. Install the mirror arm to the UTV cage using supplied hardware. **See Photo 9.**
8. Install mirror to arm using supplied hardware. **See Photo 10.**

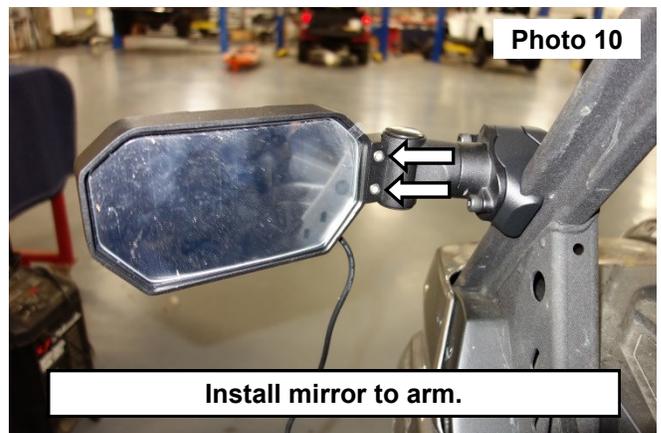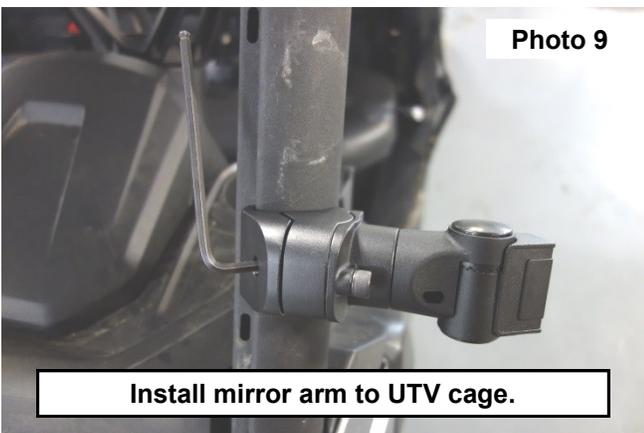

9. Plug in the mirror harness. **See Photo 11.**

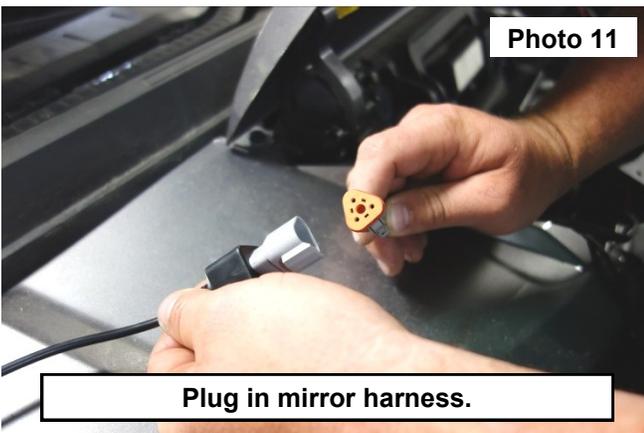

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

