

ROUGH COUNTRY

SUSPENSION SYSTEMS

INSTRUCTIONS
www.roughcountry.com

I-SHEET NUMBER: INST-00229
PART NUMBER: RCF0996CC, RCF0989QC,
RCF09107CC, RCF09107CC-6, RCF09100QC-6,
RCF09102CC-6
PRODUCT: HOOP STEP
APPLICATION: 09-14 FORD F-150 QC CC





INSTALLATION
Phone: (800) 222-7023



HARDWARE DESCRIPTION		QTY.	
HWKT- 07172X			
CARB-07168X	3/8"-16 1"L CARRIAGE BOLT	6	
FLTW-00663	3/8" X .406" ID X .75" OD FLAT WASHER	6	
FLNT-00664	3/8-16 GRADE 5 STEEL FLANGE NUT	6	
CLIP-00645X	5/16"-18 X 9/16" BARREL CLIP	6	
FW-00006	5/16 FLAT WASHER,	6	
92865A583	5/16"-18 1"L HEX HEAD CAP SCREW	6	
PARTS INCLUDED		QTY.	
DRIVER SIDE			1
PASSENGER SIDE			1




N-FAB NERF STEP SYSTEM

STEP 1: Identify driver side step.

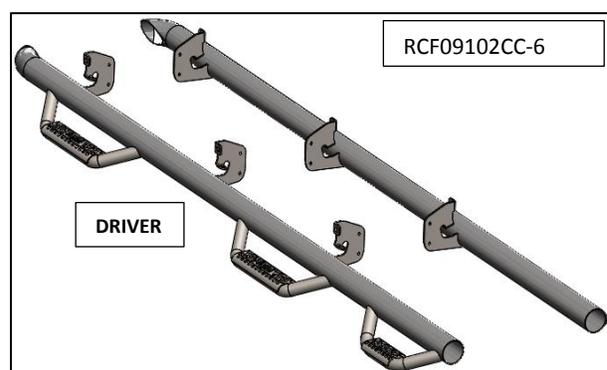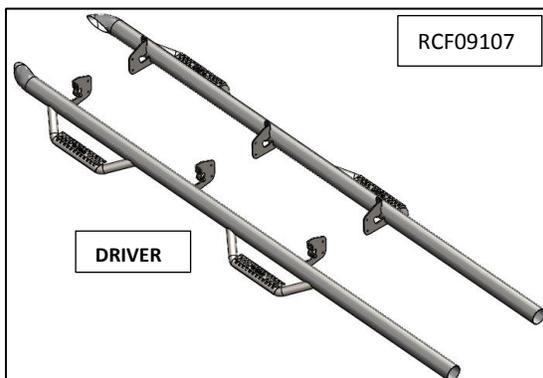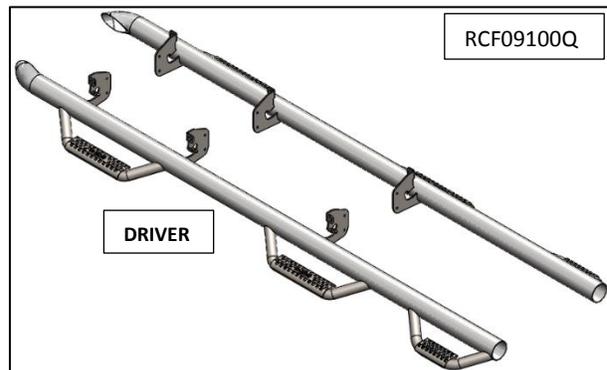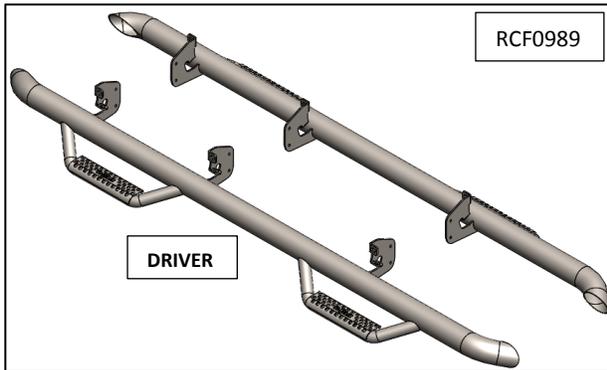

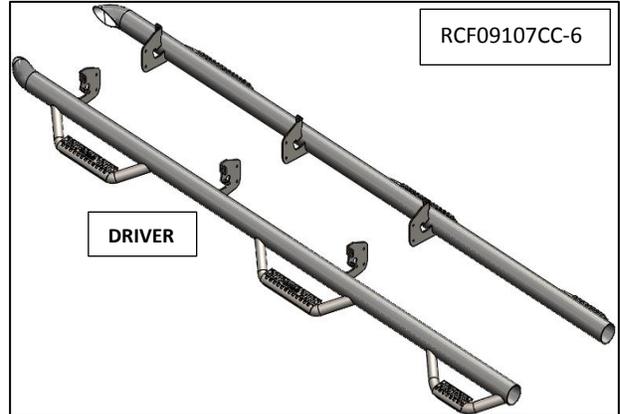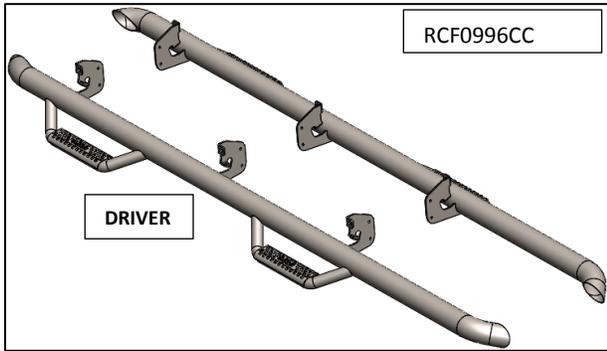

Step 2: Insert the supplied 5/16" U-clips in the upper location in each (x3) mounting position.

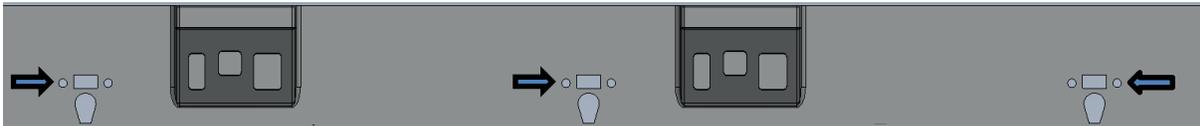

Step 3: Carefully raise step into place aligning brackets to each mounting position. Use the supplied 5 1/6" hex bolt, 5 1/6" washer and 5 1/6" hex nut and hand tighten all x3 upper mounts.

Step 4: Next, install the supplied 3/8"x3/4" carriage bolts, 3/8" washers and 3/8" nuts in all x3 lower mounts and leave loose.

Step 5: Tighten upper mounts first then pinch weld bolts. Torque to 20ft./lbs. to secure steps to the truck.

Step 6: Repeat steps 2-5 with passenger side step.

