



## Installation Instructions for 2014-2015 F-150 All Models


Instructions for: RCF15107CC, RCF15107CC-6, RCF1596CC, RCF1596CC-6

<b>PARTS INCLUDED:</b>	<b>Qty</b>
Driver Side Nerf-Step	1
Passenger Side Nerf-Step	1
<b>HARDWARE PACK:</b>	<b>1</b>
8mm Flanged nuts	18



### INSTALLTION:


**Step 1:** Starting with the Driver Side. Remove all 8mm flange nuts from the 8mm factory threaded studs to remove the OE running boards. Repeat for passenger side. **(Fig.A)**.

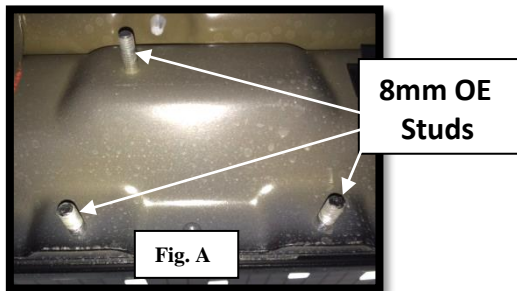

**Step 2:** Locate the driver Side Nerf-Step. The longer bend end and or the straight capped end go toward the rear of the vehicle.

**Step 3:** Carefully raise Nerf-Step into position and align the three brackets with the nine 8mm OE threaded studs.

**Step 4:** Using the supplied 8mm flanged nuts, fasten all nine mounting positions. Leave loose at this time. **(Fig.B)**

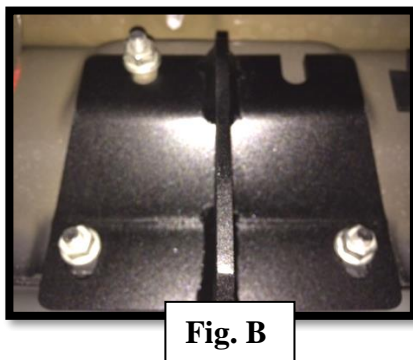

**Step 5:** Starting with the rear bracket, push up towards the pinch weld so the 3" main bar is as high and tight to the body as possible. Tighten all three 8mm flanged nuts.

**Step 6:** Move to the front bracket and repeat same step. Finish by securing the center bracket.

**Step 7:** Repeat steps 3-6 for passenger side. Your install is now complete.

*Products licensed to Rough Country by Fichter Designs are protected by US patent law and International Copy Right law. US Patent # 6855783, # 6874801, # 7416202 apply. Other patents and continuances pending. Products configuration also protected by International Trade Dress Law. All Design and Patent infringements will be prosecuted to the full extent of the law*