

ROUGH COUNTRY

SUSPENSION SYSTEMS®

ROUGH COUNTRY 5" x 7" RECTANGLE HEADLIGHT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:

Rectangle Head Light x2
H13 Wiring Adapter x 2
H4 Wiring Adapter x 2

TOOLS NEEDED:

Phillips Bit Driver



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs



INSTALLATION INSTRUCTONS

1. Installation shown on a Jeep XJ Cherokee but will fit other 5x7 headlight applications. Refer to those corresponding manuals for those vehicles to install. On the XJ Jeep remove the (4) screws from the outer head light trim panel using a Phillips bit driver. Retain screws for later use. **See Photo 1.**
2. Remove the outer head light trim panel. **See Photo 2.**



3. Locate and remove the (4) Phillips screws securing the head light into the head light bezel. **See Photo 3.**
4. Remove the head light and disconnect the plug from the wiring harness. **See Photo 4.**



5. Determine which headlight plug will be needed for installation and connect it to the vehicles wiring harness. **See Photo 5.** H4 and H13 adapter harnesses are included with this kit.
6. Install the new head light in to the head light bezel. Then apply the OE trim ring around the head light and secure using the retained screws. **See Photo 6.**




7. Confirm the head lights are properly wired in and work properly.

8. Install the head light trim panel and secure using the retained screws. Tighten using a Phillips bit driver. **See Photos 7 and 8.**
9. Check the height and the alignment of the lights. Perform this in a dark room with the front of the vehicle facing 25



feet away from a wall or flat surface with the lights on the low setting. **See Photo 9.** Adjust as necessary.

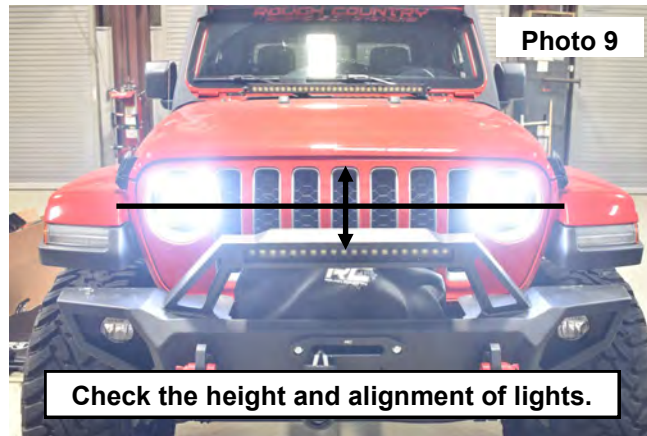

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

