

## Nissan Titan Crew Cab

RCN1678CC

### Recommended Tools:


12mm wrench/socket

### Bolt Kit:


12) M8X30mm Hex cap bolt



**Step 1:** Remove factory running bars if equipped and discard. You will see the 8mm threaded mounts in the body. (Fig.A)

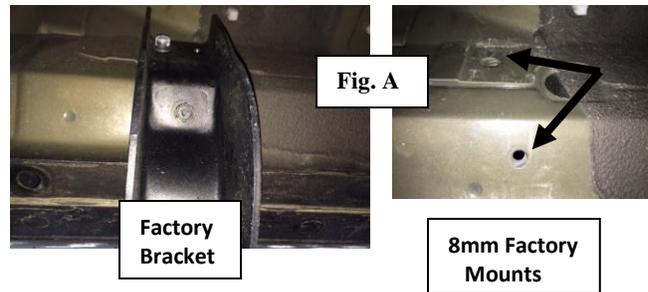


**Step 2:** Starting with the driver's side, lift step up into position aligning the step bracket with the 8mm OE mounts. (Fig. B)

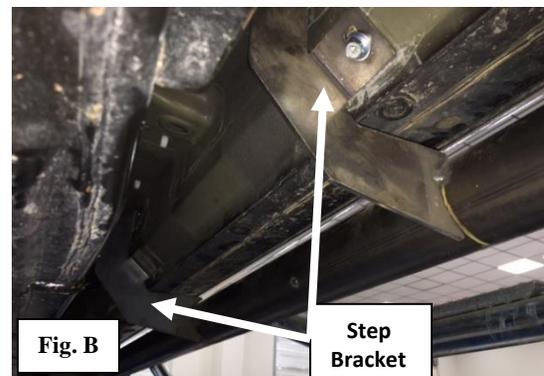


*Products licensed to Rough Country by Fichter Designs are protected by US patent law and International Copy Right law. US Patent # 6855783, # 6874801, # 7416202 apply. Other patents and continuances pending. Products configuration also protected by International Trade Dress Law. All Design and Patent infringements will be prosecuted to the full extent of the law.*

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items

**Step 3:** Install using the supplied M8x30mm Hex bolt and hand tighten at this time. **(Fig. C)**

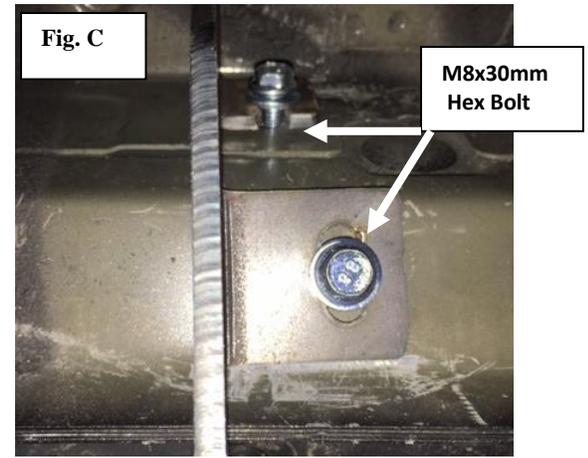

**Step 4:** After final adjustment, tighten all hardware starting with the three lower bolts and then finish with the upper bolts. **(Fig. D)**

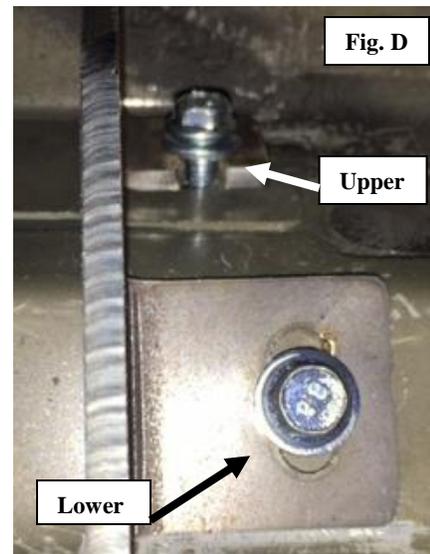

**Step 5:** Repeat steps 2-4 with the passenger side. **NOTE: Periodically check all hardware for tightness to insure longevity and safety of your steps.**