


## FK29

### TACOMA REAR DRIVE SHAFT SPACER KIT

#### CONTENTS

#### QTY


Spacer 8mm	2
Bolt M10 x 1.25 x 35	2
Washer Flat M10	2
Washer Spring M10	2

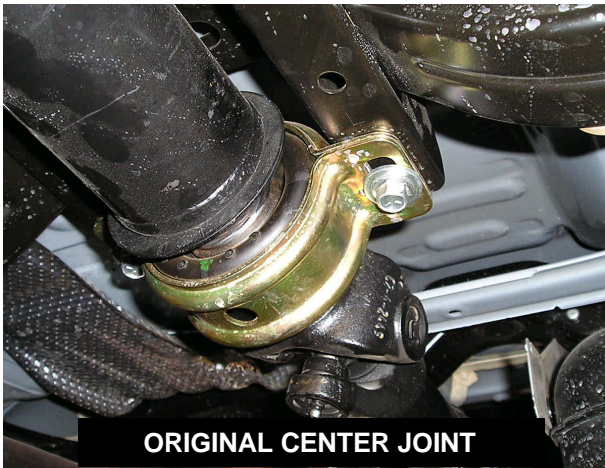

#### Installation Procedure

Loosen both of the original drive shaft center joint retaining bolts.  
Remove one bolt only and place spacer between center joint and chassis.  
Clamp in place using the supplied M10 bolt, flat and spring washer.

Repeat on opposite side of center joint.

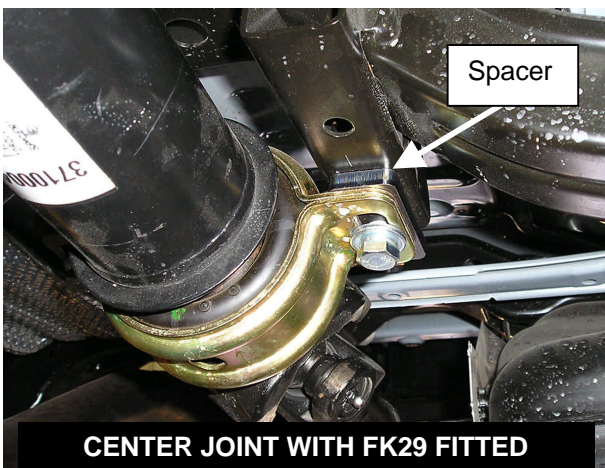

Tighten both bolts firmly.