

Single Steering Stabilizer

Chevy 1/2, 3/4, 1 Ton, Blazer, Jimmy, Suburban | 1969-87

Chevy Blazer, Jimmy, Suburban | 1969-91


Dodge 1/2, 3/4, 1 Ton, Ramcharger, Trailduster | 1960-1993

Ford F350 Monobeam | 1986-1996

Jeep CJ Series | 1942-1986

Part #: 55310, 55307

Rev. 041516

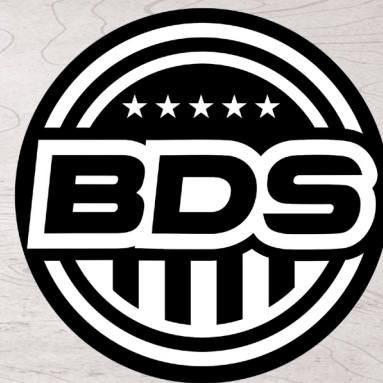

491 W. Garfield Ave., Coldwater, MI 49036 • Phone: 517-279-2135

Web/live chat: www.bds-suspension.com • E-mail: tech-bds@ridefox.com

SAFETY WARNING

BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known.

INSTALLATION INSTRUCTIONS

1. Park the vehicle on a clean, flat surface and block the rear wheels for safety. Turn the wheels straight ahead.
2. Install the axle bracket against the front face of the axle. On Jeep models, install as far to the driver's side as possible (Fig 1). On Dodge and Chevy models mount the bracket to the inside of the leaf spring. Attach the bracket with the supplied 3/8" u-bolt, nuts and washers. Torque nuts to 30 ft-lbs.

FIGURE 1



3. Attach the body of the cylinder to the axle bracket using the provided stem bushings, stem washers and 3/8" standard nuts. Leave hardware loose.
4. Install the tie rod mounting bracket to the rod end of the cylinder with the provided stem bushings, stem washer and 3/8" standard nuts. Install the bracket of the "L" goes away from the cylinder. Leave hardware loose.
5. Extend/compress the cylinder so that 4-4.5" of rod is showing. Attach the tie rod mounting bracket to the tie rod with the provided 5/16" u-bolts, nuts and washers (Fig 2). Leave hardware loose.

55310 Parts List

| Part # | Qty | Description |
|------------|-----|----------------------------------|
| 01501 | 1 | 'L' Tie Rod Bracket |
| 01507 | 1 | Axle Bracket |
| 383004000R | 1 | 3/8" x 3" x 4" Round U-Bolt |
| 561140200R | 2 | 5/16" x 1-1/4" x 2" Round U-Bolt |
| | 4 | 1/4" USS Washers |
| | 2 | 3/8" SAE Washers |
| | 4 | 5/16"-18 Lock Nuts |
| | 2 | 3/8"-16 Lock Nuts |

55307 Parts List

| Part # | Qty | Description |
|------------|-----|-------------------------------------|
| 01501 | 1 | 'L' Tie Rod Bracket |
| 01507 | 1 | Axle Bracket |
| 382340334R | 1 | 3/8" x 2-3/4" x 3-3/4" Round U-Bolt |
| 561140200R | 2 | 5/16" x 1" x 1-3/4" Round U-Bolt |
| | 4 | 1/4" USS Washers |
| | 2 | 3/8" SAE Washers |
| | 4 | 5/16"-18 Lock Nuts |
| | 2 | 3/8"-16 Lock Nuts |

FIGURE 2



6. With the tie rod bracket on the top of the tie rod, rotate the bracket to ensure clearance and double check to make sure the cylinder is in the center of its stroke. Torque the 5/16" u-bolts to 20 ft-lbs.
7. Tighten the nuts at both ends of the cylinder until the bushings begin to swell. Install and tighten the provided jam nuts on each end.
8. Perform a steering sweep to check for clearances. Adjust the brackets as necessary.
9. Check all hardware after 500 miles.



WE WANT TO SEE YOUR RIDE!

Grab photos of your BDS-equipped truck in action and send them in for a chance to be featured. Send it in to our Bad Ass Rides customer gallery at bds-suspension.com/bar and post them on the BDS Fan Page on Facebook at facebook.com/BDSSuspensions. Don't forget about your BDS swag! BDS offers t-shirts, hoodies, decals and more available on the BDS website or through your local BDS distributor.

TIME TO HAVE SOME FUN

Thank you for choosing BDS Suspension.

For questions, technical support and warranty issues relating to this BDS Suspension product, please contact your distributor/installer before contacting BDS Suspension directly.