



## D1258 Installation Instructions 2014-2026 Ram 2500 2.5" Spacer Kits

### Read and understand all instructions and warnings prior to installation of product and operation of vehicle.

Zone Offroad Products recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known. Minimum tool requirements include the following: Assorted metric and standard wrenches, hammer, hydraulic floor jack and a set of jack stands. See the "Special Tools Required" section for additional tools needed to complete this installation properly and safely.

#### »» PRODUCT SAFETY WARNING

Certain Zone Suspension Products are intended to improve off-road performance. Modifying your vehicle for off-road use may result in the vehicle handling differently than a factory equipped vehicle. Extreme care must be used to prevent loss of control or vehicle rollover. Failure to drive your modified vehicle safely may result in serious injury or death. Zone Offroad Products does not recommend the combined use of suspension lifts, body lifts, or other lifting devices.

You should never operate your modified vehicle under the influence of alcohol or drugs. Always drive your modified vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Always wear your seat belt.

#### »» TECHNICAL SUPPORT

[www.zoneoffroad.com](http://www.zoneoffroad.com) may have additional information about this product including the latest instructions, videos, photos, etc.

Send an e-mail to [tech-zone@ridefox.com](mailto:tech-zone@ridefox.com) detailing your issue for a quick response.

**888.998.ZONE** Call to speak directly with Zone tech support.

#### Difficulty Level

easy 1 2 **3** 4 5 difficult

Estimated installation: 2 hours

#### Special Tools Required

1/2" Drill

#### Tire/Wheel Fitment

See front box kit

#### »» PRE-INSTALLATION NOTES

1. Special literature required: OE Service Manual for model/year of vehicle. Refer to manual for proper disassembly/reassembly procedures of OE and related components.
2. Adhere to recommendations when replacement fasteners, retainers and keepers are called out in the OE manual.
3. Larger rim and tire combinations may increase leverage on suspension, steering, and related components. When selecting combinations larger than OE, consider the additional stress you could be inducing on the OE and related components.
4. Post suspension system vehicles may experience drive line vibrations. Angles may require tuning, slider on shaft may require replacement, shafts may need to be lengthened or trued, and U-joints may need to be replaced.
5. Secure and properly block vehicle prior to installation of Zone Offroad Products. Always wear safety glasses when using power tools.
6. If installation is to be performed without a hoist, Zone Offroad Products recommends rear alterations first.
7. Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle attitude. Always measure the attitude prior to beginning installation.

rev120925

**\*Important\* Verify you have all of the kit components before beginning installation.**

### D1258 Kit Contents

<i>Qty</i>	<i>Part</i>
2	Coil Spacers
1	Trackbar Bracket
1	2.125" Trackbar Spacer Sleeve
2	Bump Stop
2	15" Sway Bar Links
4	Hour Glass Bushing
4	Sway Bar Sleeves (5/8" OD x 1.375" Long)
1	Bolt Pack - Coil Spacer (#422)
1	Bolt Pack - Rear Box Kit (#497)

## INSTALLATION INSTRUCTIONS

1. Park vehicle on clean flat and level surface. Block front wheels for safety.
2. Disconnect the rear trackbar from the axle, retain all hardware. Fig 1

### Step 2 Note

*You may need to detach the vent hose clip from the track bar bracket to prevent the nut tab from puncturing the vent hose.*

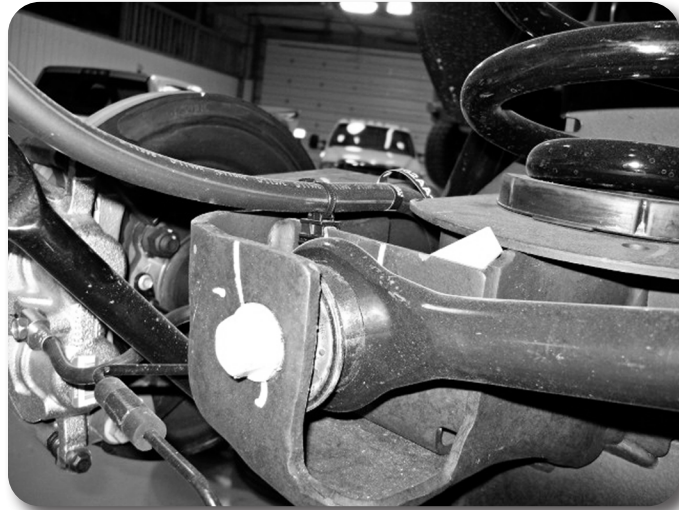


Figure 1

3. Raise rear of vehicle and support frame rails with jack stands.
4. Remove the rear wheels.
5. Support the rear axle with a hydraulic jack.
6. Disconnect the rear sway bar links from the frame and sway bar. Fig 2



Figure 2

7. Disconnect the rear shocks and lower the axle, retain hardware. On the driver's side it is easiest to access the top hardware by cutting the inner fender well as shown. This trim procedure is not required but greatly aids in removal and installation of the shock. Fig 3a, 3b



Figure 3A



Figure 3B

8. Remove the rear coil springs and upper and lower coil spring retainers.
9. Install the rear coil spacers with 3/8" hardware (BP 422). Tighten 3/8" hardware to 35 ft-lbs.
10. Clearance the bottom two holes in the factory track bar bracket with a 1/2" drill bit to accept 7/16" hardware.
11. Install the track bar bracket to the axle. Hardware is located in bolt pack 497. First place the 2-1/8" long sleeve and place it inside the track bar bracket at the factory track bar bolt location using the provided 9/16" x 4" hardware. Using the 7/16" x 1-1/2" bolts, washers, and flange nuts attach the bracket through the bottom holes. Fig. 5A & 5B

### Step 11 Note

*Track bar hardware is in #497*

### Step 11 Note

*It may be necessary to grind the top of the OE track bar rear mount flange due to vehicle variances.*



Figure 5A

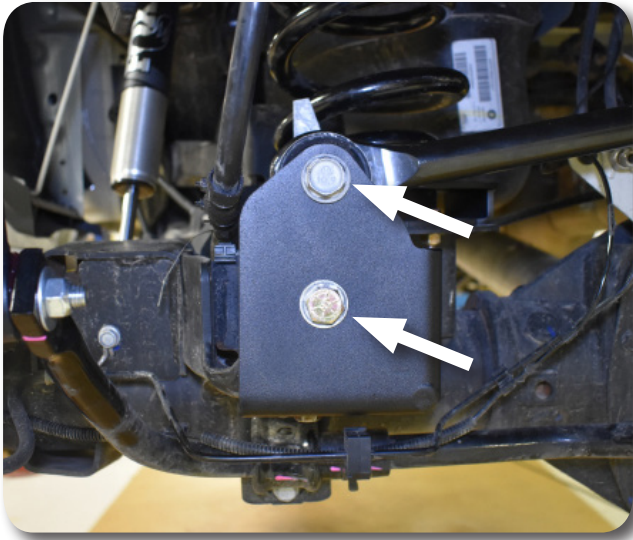


Figure 5B

12. Tighten trackbar bracket hardware as follows: 14mm factory hardware 140 ft-lbs, 7/16" hardware 70 ft-lbs.
13. Reinstall factory coils with OEM isolators on the spacers. Raise axle and ensure that the isolators are centered over the factory mounts. Orientate the coils so that the lower locating tab is at the rear of the vehicle. Fig 6

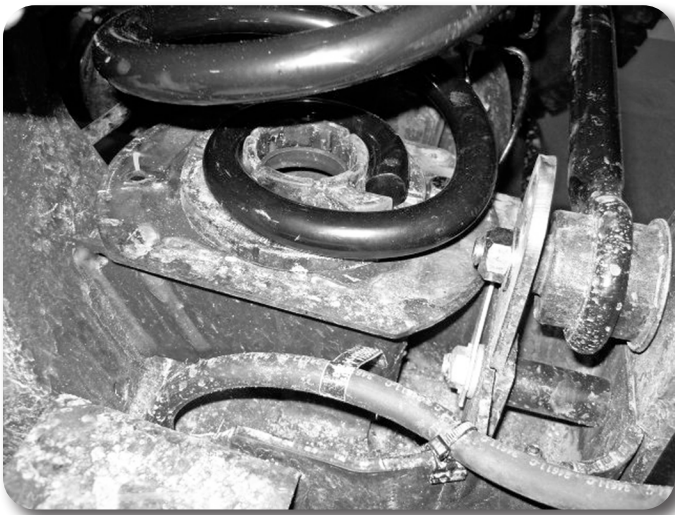


Figure 6

14. Open up the hole rearward of the OE shock hole inside the frame to 3/8" with a drill bit. Install the shock eliminator bracket onto the shock using hardware in bolt pack 946 included in the shock box. Tighten 1/2" eliminator hardware to 75ft-lbs. Install the shocks into the vehicle. Tighten 3/4" eliminator hardware to 120ft-lbs Fig. 7



Figure 7

### Step 15 Note

*Sway bar hardware (12mm x 65mm) is in #497*

15. Grease bushings and sleeves and install into sway bar links. Install sway bar links with new 12mm hardware. (BP 497). Tighten to 45 ft-lbs. Fig 8

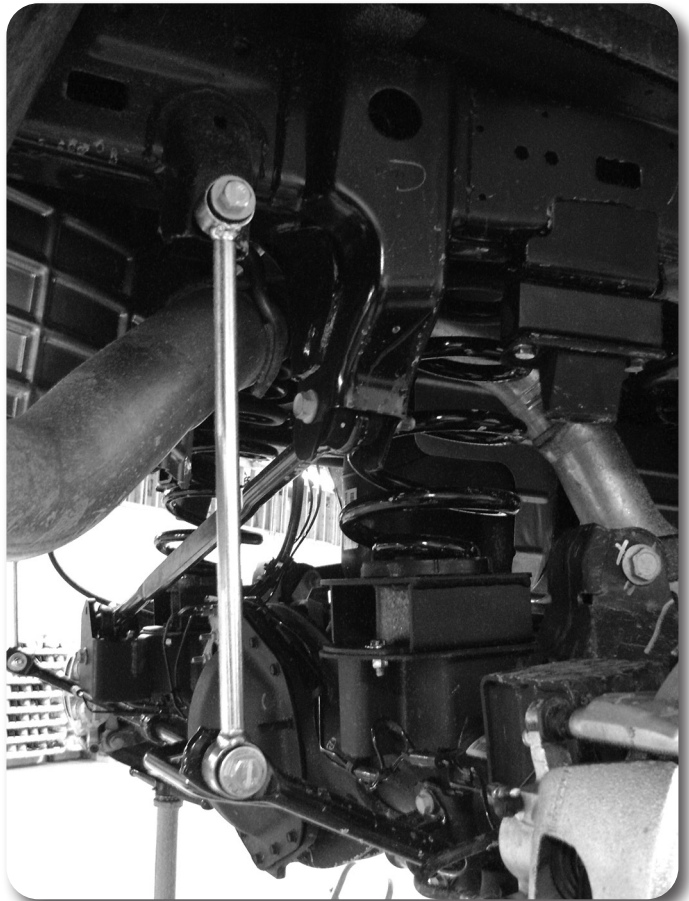


Figure 8

16. Remove the factory bump stops. Install bump stop drop brackets with new 10mm hardware (BP 497). Install so the small holes are to the inside of the vehicle. Tighten to 35 ft-lbs. Fig 9a, 9b

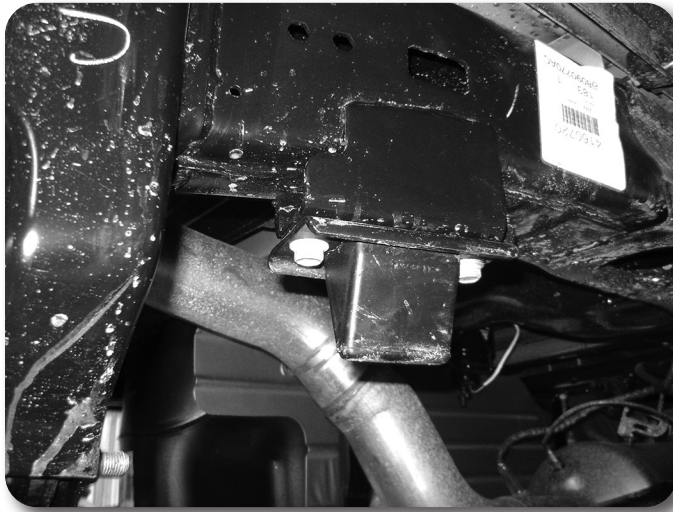


Figure 9A

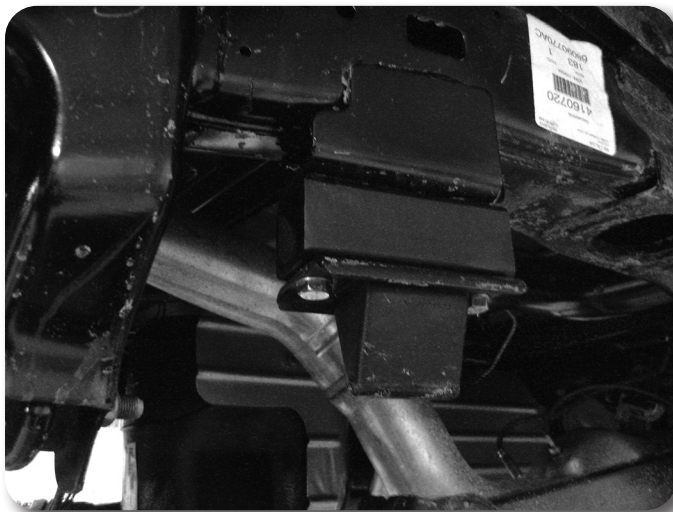


Figure 9B

17. Reinstall wheels, if installing aftermarket wheels it is recommended to remove all of the rotor retaining clips to allow the wheel to sit flush against the rotor. Tighten to factory specifications.
18. Lower vehicle to the ground.
19. Attach trackbar to the new bracket with factory trackbar bolt and nut tab. It may be necessary to have an assistant push on one side of the truck slightly to get the holes aligned. Tighten to 154 ft-lbs.
20. Recheck all hardware for proper torque, check again after 500 miles.

### Post-Installation Warnings

1. Check all fasteners for proper torque. Check to ensure for adequate clearance between all rotating, mobile, fixed, and heated members. Verify clearance between exhaust and brake lines, fuel lines, fuel tank, floor boards and wiring harness. Check steering gear for clearance. Test and inspect brake system.
2. Perform steering sweep to ensure front brake hoses have adequate slack and do not contact any rotating, mobile or heated members. Inspect rear brake hoses at full extension for adequate slack. Failure to perform hose check/ replacement may result in component failure.
3. Perform head light check and adjustment.
4. Re-torque all fasteners after 500 miles. Always inspect fasteners and components during routine servicing.

<b>Component</b>	<b>Torque (FT-LBS)</b>
<i>14mm Trackbar Bracket Hardware</i>	<i>140</i>
<i>7/16" Trackbar Bracket Hardware</i>	<i>70</i>
<i>1/2" Shock Eliminator Hardware</i>	<i>75</i>
<i>3/4" Shock Eliminator Hardware</i>	<i>120</i>
<i>Sway Bar Link 12mm Hardware</i>	<i>45</i>
<i>Bump Stop 10mm Hardware</i>	<i>35</i>
<i>Trackbar to Bracket Bolt</i>	<i>154</i>